McIntosh

MR 74

AM/FM TUNER

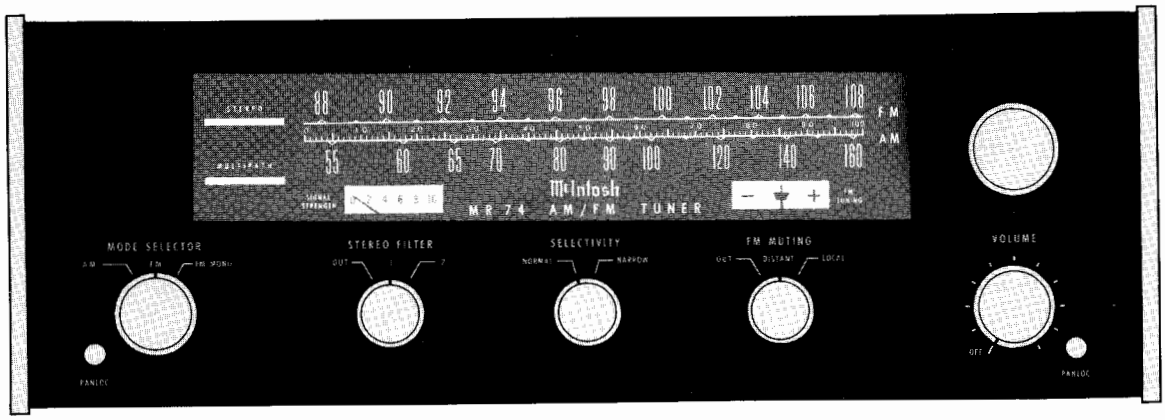

SERVICE INFORMATION

STARTING WITH SERIAL NO. AC1001

McINTOSH LABORATORY INC. 2 CHAMBERS STREET BINGHAMTON, NEW YORK

ELECTRICAL SPECIFICATIONS

AM TUNER SECTION

SENSITIVITY

75μV IHF (external ant.)

SIGNAL TO NOISE RATIO

45 dB IHF minimum; 55 dB at 100% modulation.

HARMONIC DISTORTION

Does not exceed 1% at 30% modulation.

SELECTIVITY, ADJACENT CHANNEL

35 dB minimum IHF in "NORMAL" Position.
45 dB minimum IHF in "NARROW" Position.

IMAGE REJECTION

65 dB minimum 540 kHz - 1600 kHz.

FREQUENCY RESPONSE

3.5 kHz - 6 dB, "NORMAL" Position.
2.1 kHz - 6 dB, "NARROW" Position.

FM TUNER SECTION

USEABLE SENSITIVITY

2.5 microvolts at 100% modulation (±75 kHz deviation) for 3% total noise and harmonic distortion IHF.

SIGNAL TO NOISE RATIO

70 dB below 100% modulation.

CAPTURE RATIO

1.5 dB minimum.

HARMONIC DISTORTION

Mono: Does not exceed 0.3% at 100% modulation ±75 kHz deviation.

Stereo: Does not exceed 0.7%.

AUDIO FREQUENCY RESPONSE

±1 dB 20 Hz to 15,000 Hz with standard de-emphasis (75 μsec.) and 19,000 Hz pilot filter.

SELECTIVITY

ADJACENT CHANNEL:

6 dB minimum IHF in "NORMAL" Position.
15 dB minimum IHF in "NARROW" Position.

ALTERNATE CHANNEL:

58 dB minimum IHF in "NORMAL" Position.
88 dB minimum IHF in "NARROW" Position.

SPURIOUS REJECTION

90 dB IHF minimum.

IMAGE REJECTION

95 dB minimum, 88 MHz - 108 MHz.

STEREO SEPARATION

35 dB at 1,000 Hz.

SCA FILTER

50 dB rejection from 67 kHz to 74 kHz.
275 dB per octave slope.

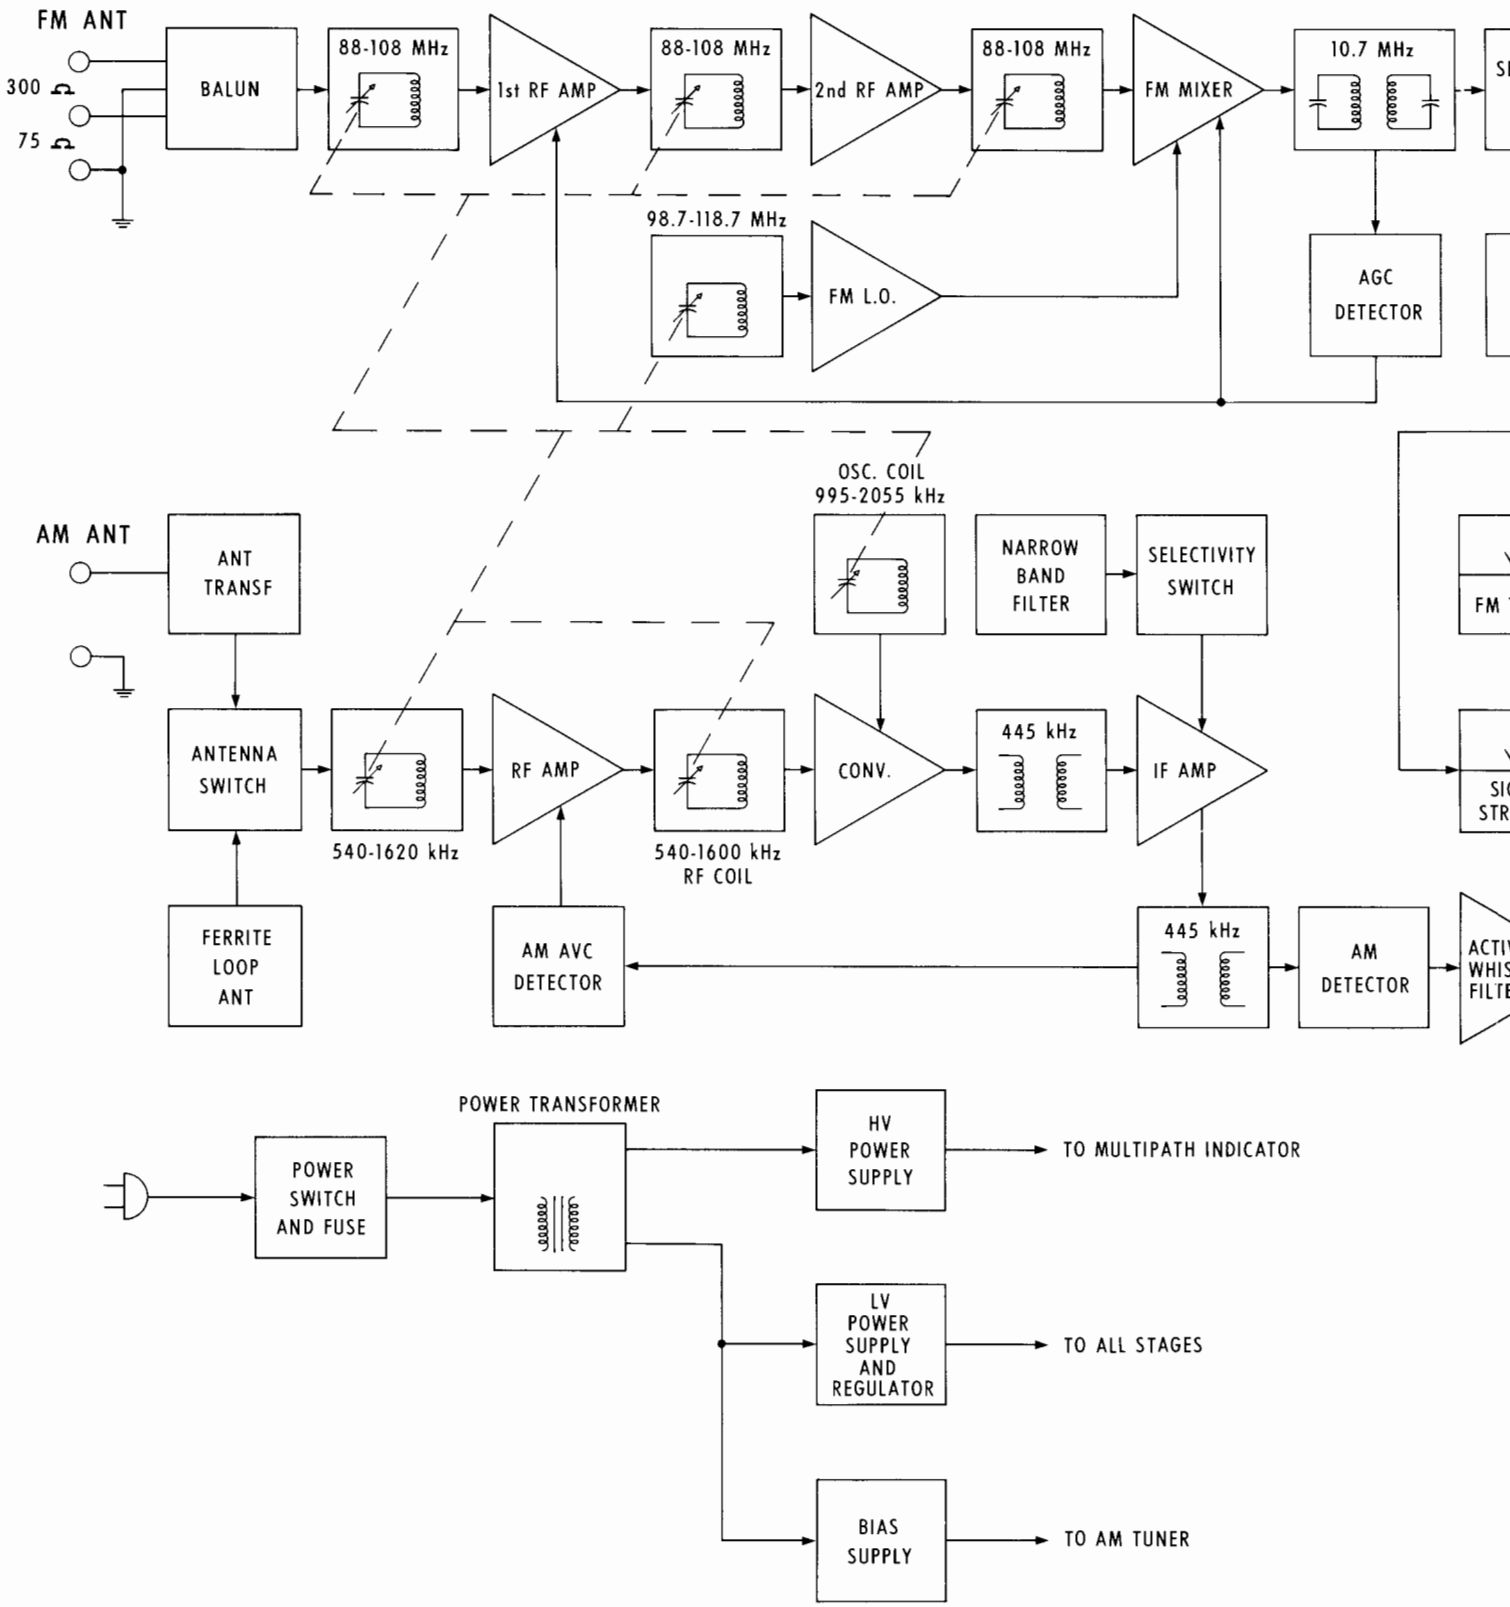
FM ANT
300 Ω
75 Ω
BALUN
88-108 MHz
1st RF AMP
88-108 MHz
2nd RF AMP
88-108 MHz
FM MIXER
10.7 MHz
98.7-118.7 MHz
FM L.O.
AGC DETECTOR
AM ANT
ANT TRANSF
OSC. COIL 995-2055 kHz
NARROW BAND FILTER
SELECTIVITY SWITCH
ANTENNA SWITCH
540-1620 kHz
RF AMP
540-1600 kHz RF COIL
CONV.
445 kHz
IF AMP
FERRITE LOOP ANT
AM AVC DETECTOR
445 kHz
AM DETECTOR
POWER TRANSFORMER
POWER SWITCH AND FUSE
HV POWER SUPPLY
TO MULTIPATH INDICATOR
LV POWER SUPPLY AND REGULATOR
TO ALL STAGES
BIAS SUPPLY
TO AM TUNER

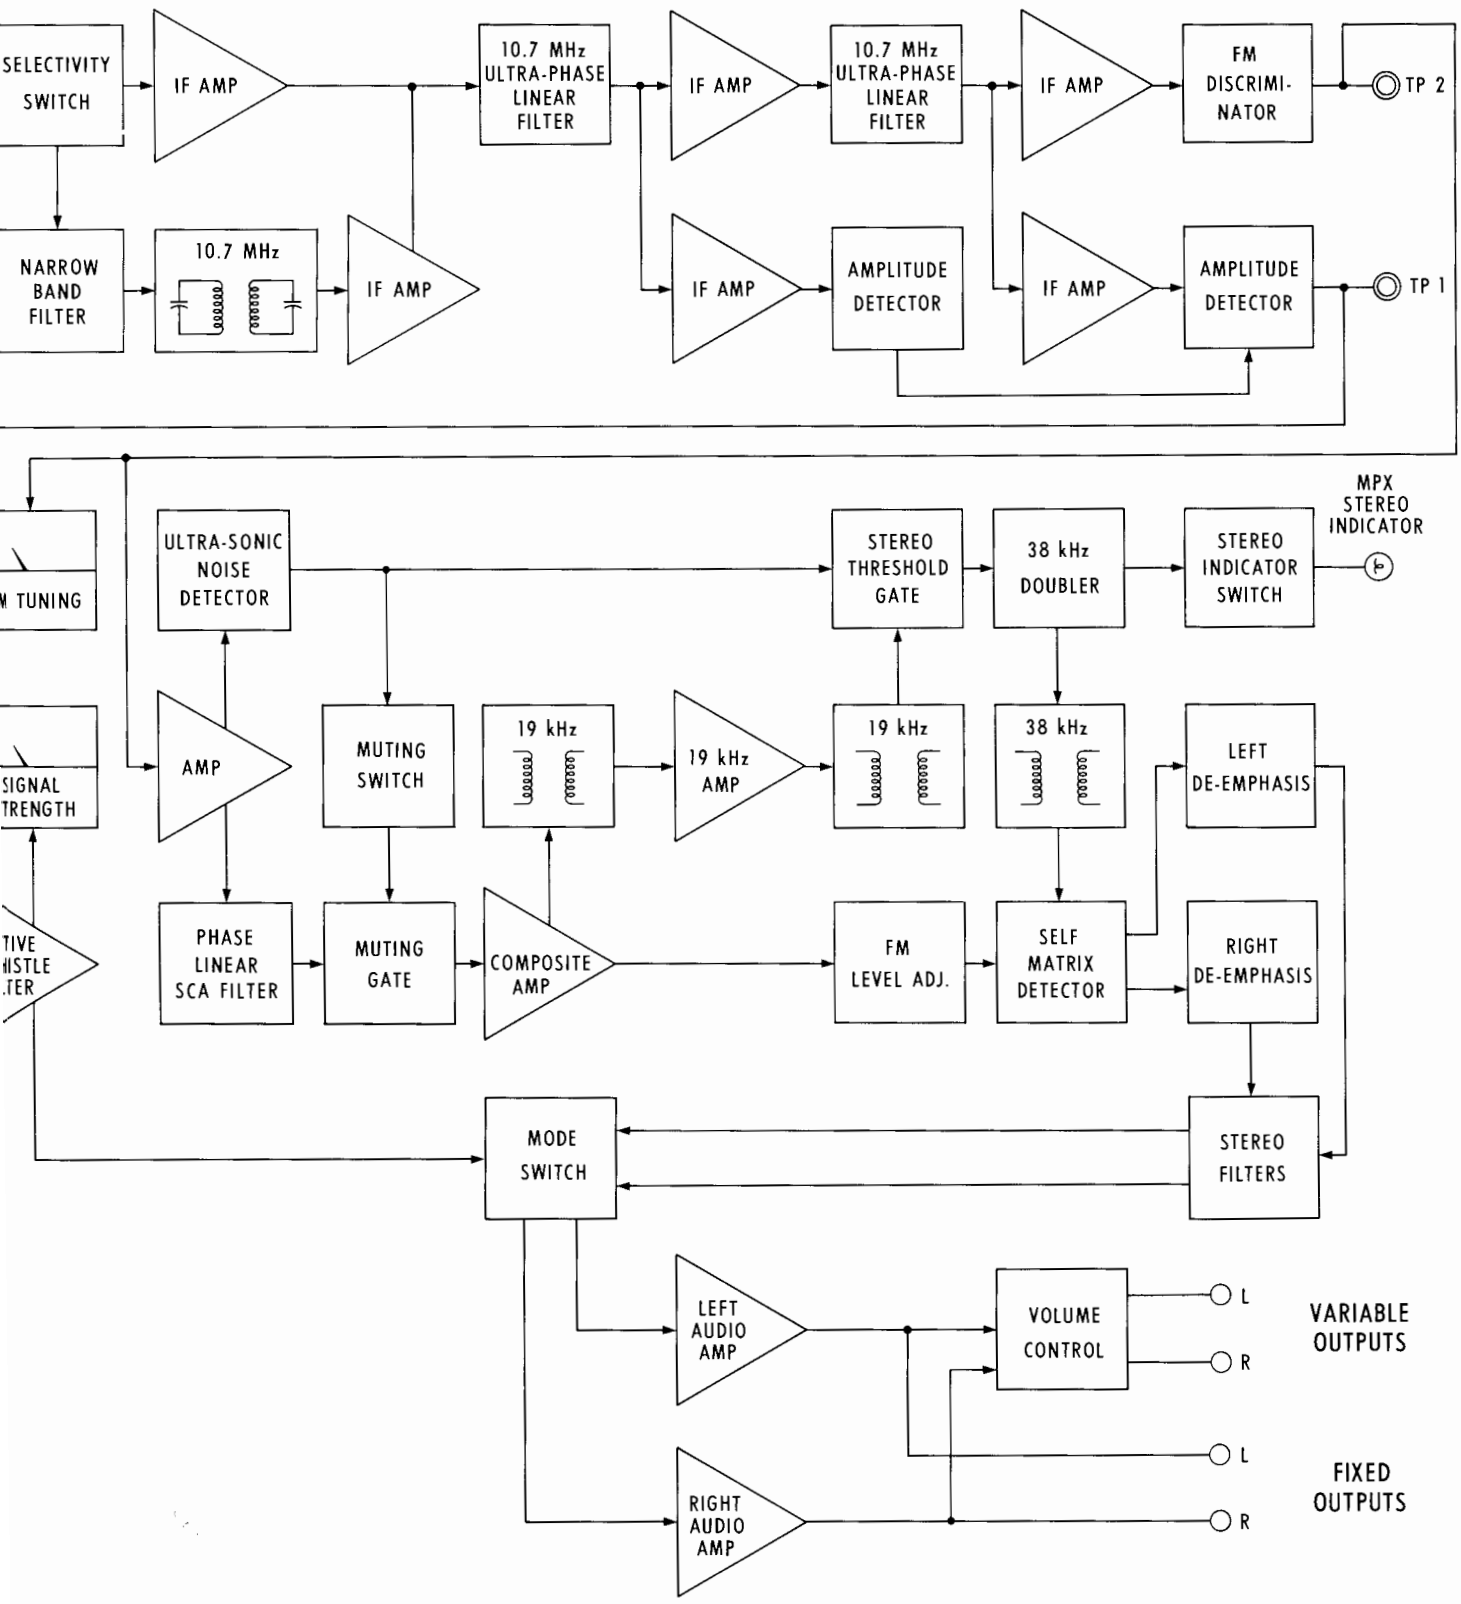
SELECTIVITY SWITCH
IF AMP
10.7 MHz ULTRA-PHASE LINEAR FILTER
IF AMP
10.7 MHz ULTRA-PHASE LINEAR FILTER
IF AMP
FM DISCRIMI-NATOR
TP 2
NARROW BAND FILTER
10.7 MHz
IF AMP
IF AMP
AMPLITUDE DETECTOR
IF AMP
AMPLITUDE DETECTOR
TP 1
M TUNING
ULTRA-SONIC NOISE DETECTOR
STEREO THRESHOLD GATE
38 kHz DOUBLER
STEREO INDICATOR SWITCH
MPX STEREO INDICATOR
SIGNAL TRENGTH
AMP
MUTING SWITCH
19 kHz
19 kHz AMP
19 kHz
38 kHz
LEFT DE-EMPHASIS
TIVE HISTLE TER
PHASE LINEAR SCA FILTER
MUTING GATE
COMPOSITE AMP
FM LEVEL ADJ.
SELF MATRIX DETECTOR
RIGHT DE-EMPHASIS
MODE SWITCH
STEREO FILTERS
LEFT AUDIO AMP
VOLUME CONTROL
L
R
VARIABLE OUTPUTS
L
R
FIXED OUTPUTS
RIGHT AUDIO AMP

CK DIAGRAM

SCHEMATIC NOTES

Unless otherwise specified: Resistance values are in ohms, 1/4 watt, and 10% tolerance; capacitance values smaller than 1 are in microfarads (μF); capacitance values greater than 1 are in picofarads (pF); inductors are in microhenries (μH).

Printed circuit board components are outlined on the schematics by dotted lines. The circled numbers around the dotted lines correspond to the numbers on the PC Board layouts.

The heavy lines on the schematics denote the primary signal path.

The terminal numbering of rotary switches is for reference only.

All voltages indicated on the schematics are measured under the following conditions:

a. Use of an 11 megohm input impedance VTVM.

b. All voltages ±10% with respect to chassis ground.

c. No signal at input or antenna terminals.

d. AC input at 120 volts, 50/60 Hz.

e. Front panel controls at:

Tuning indicator	100 MHz (no signal)
Volume	Fully CCW
Mode	AM (to measure AM section) FM (to measure FM section)
Muting	Out
Stereo filter	Out
Panel Lights	Bright
Selectivity	Normal

f. Voltages shown in rectangles are measured with selectivity switch in the "Narrow" position.

POINTER DRIVE

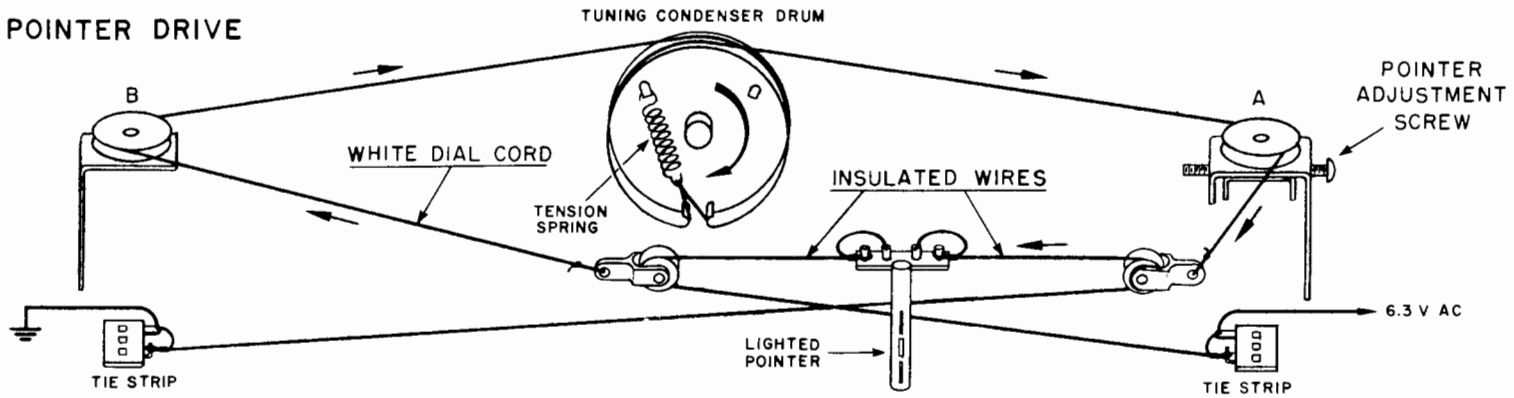

Step 1 Before stringing unit, turn pointer adjustment screw until pulley "A" is in the center of its travel.

Step 2 String unit as shown.

Step 3 After stringing unit, turn tuning shaft until pointer is as far to the left as it will go. Turn the pointer adjustment screw until the pointer coincides with the zero bar of the logging scale.

Step 4 Turn the tuning knob making the pointer move back and forth from one end of the dial scale to the other. Return pointer to the far left and, if necessary, re-adjust pointer position.

TUNING CONDENSER DRIVE

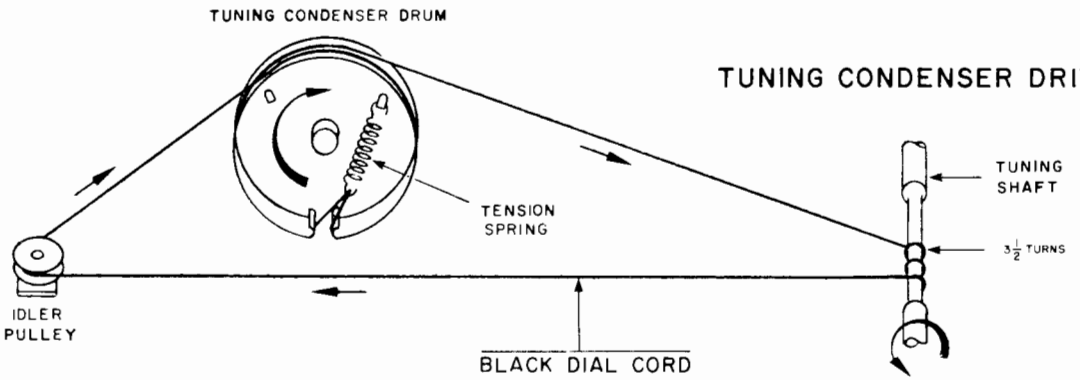

DIAL CORD SEQUENCE

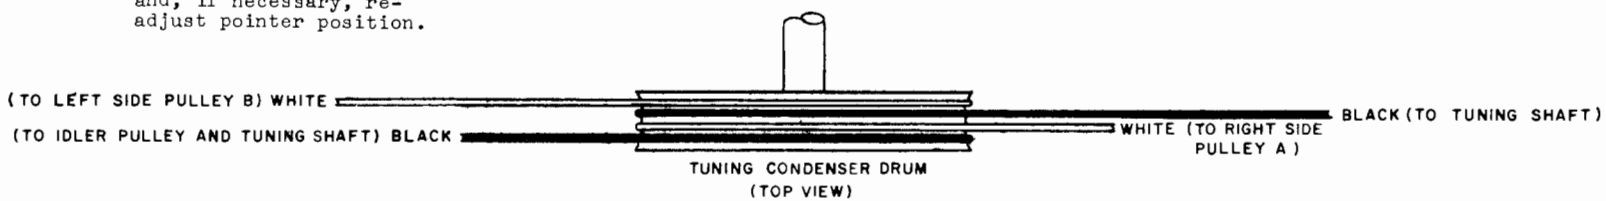
(TO LEFT SIDE PULLEY B) WHITE
(TO IDLER PULLEY AND TUNING SHAFT) BLACK
BLACK (TO TUNING SHAFT)
WHITE (TO RIGHT SIDE PULLEY A)
TUNING CONDENSER DRUM
(TOP VIEW)

POINTER DIAL STRINGING

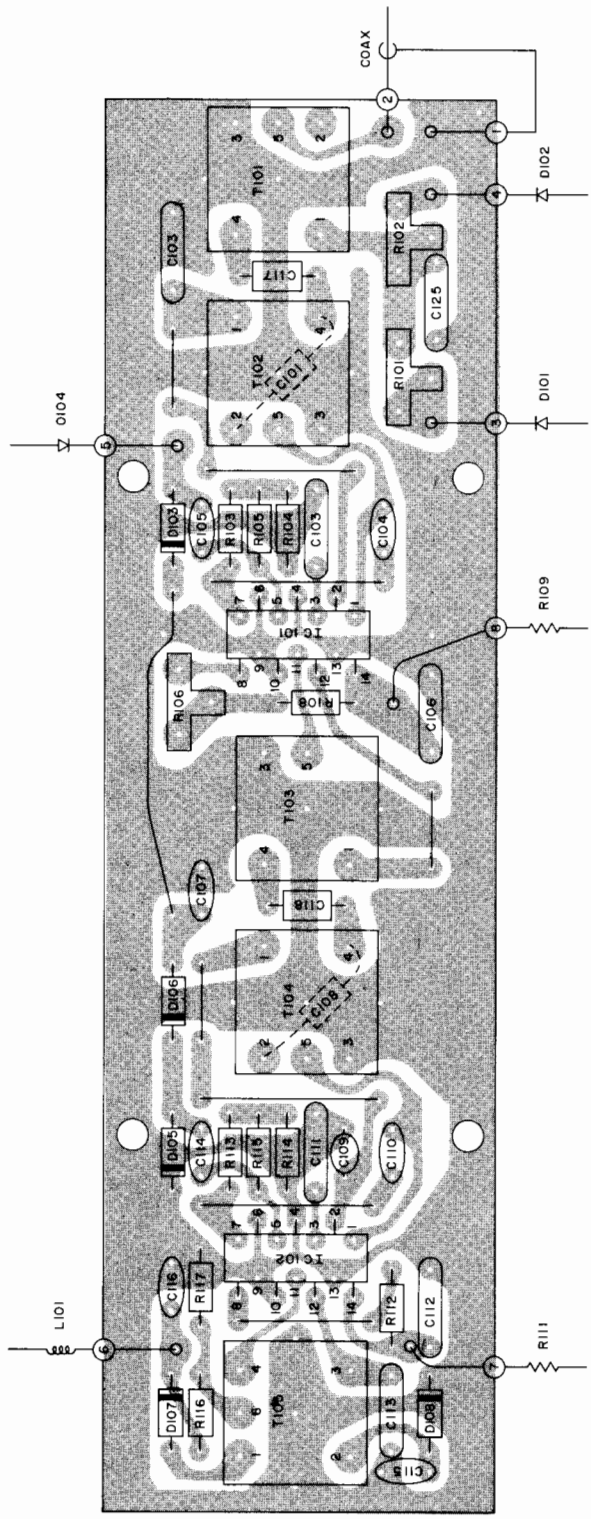

IF PC BOARD 044-277

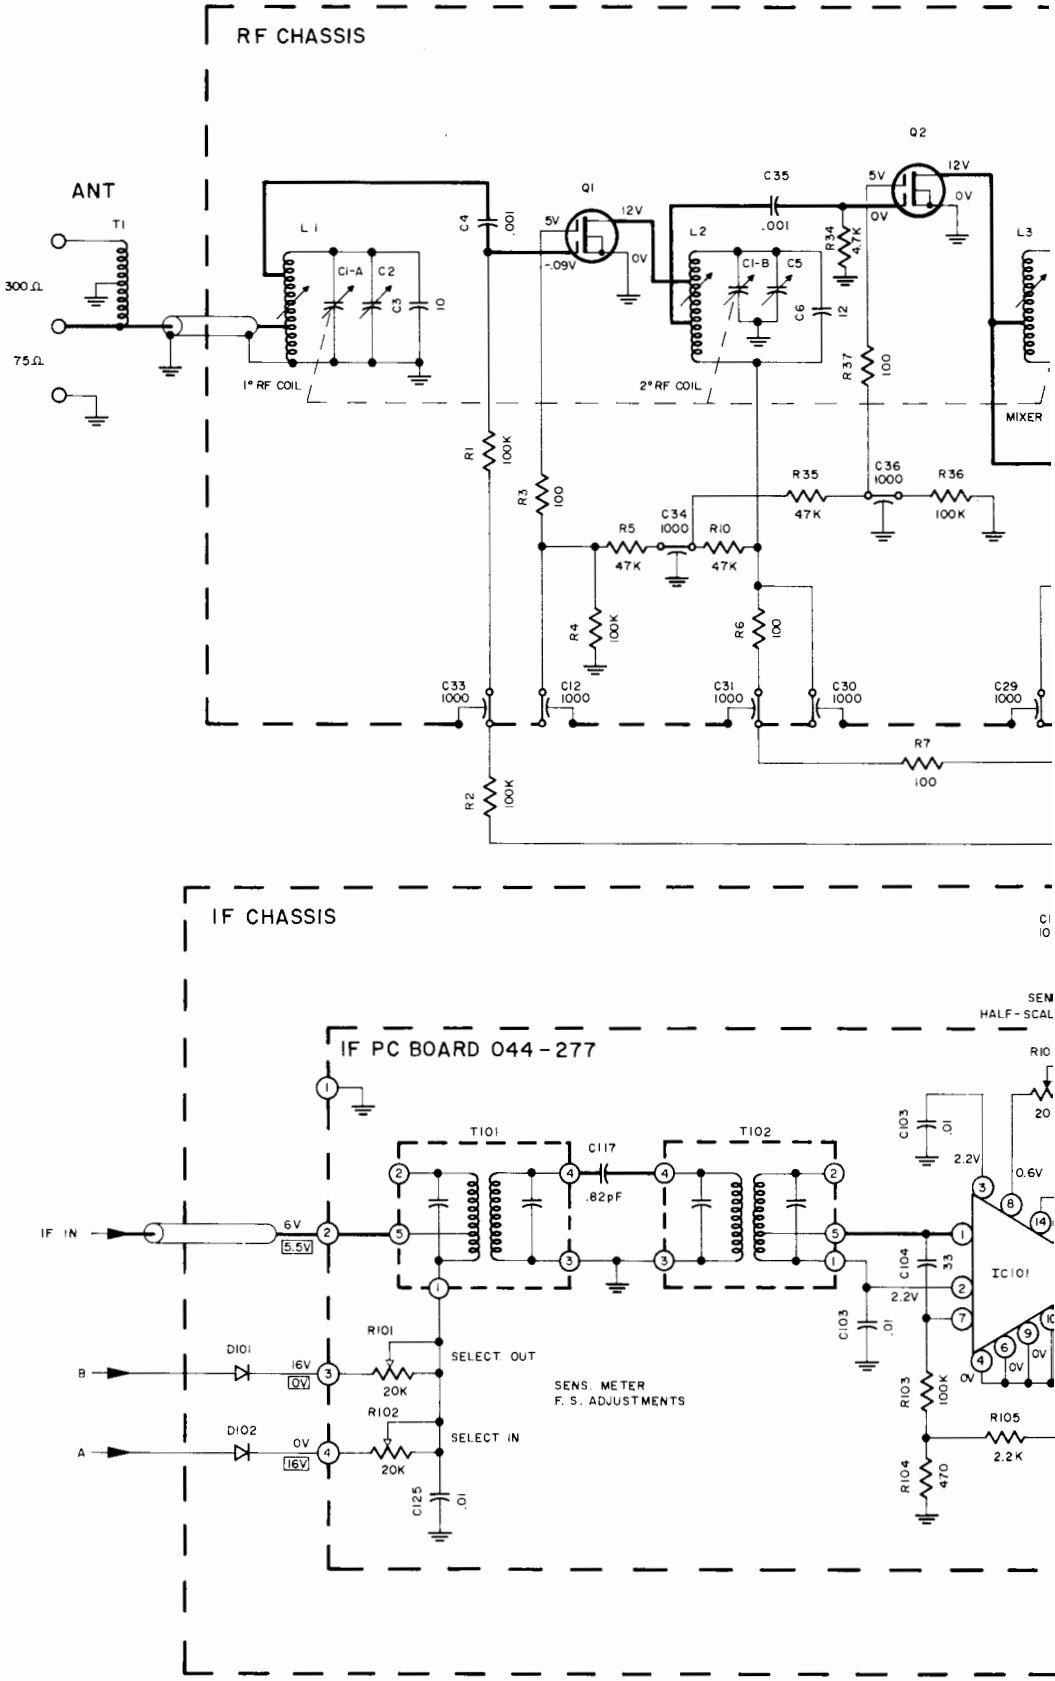
RF CHASSIS
ANT
T1
300Ω
75Ω
L1
C1-A
C2
C3
10
C4
.001
Q1
5V
12V
-.09V
0V
1° RF COIL
C35
.001
Q2
L2
C1-B
C5
C6
12
R34
4.7K
R37
100
2° RF COIL
L3
MIXER
R1
100K
R3
100
R35
47K
C36
1000
R36
100K
C34
1000
R5
47K
R10
47K
R4
100K
R6
100
C33
1000
C12
1000
C31
1000
C30
1000
C29
1000
R7
100
R2
100K
IF CHASSIS
IF PC BOARD 044-277
T101
C117
.82pF
T102
IF IN
6V
5.5V
R101
SELECT OUT
D101
16V
0V
20K
SENS. METER
F. S. ADJUSTMENTS
R102
SELECT IN
D102
0V
16V
20K
C125
.01
C103
.01
2.2V
0.6V
C104
33
IC101
R103
100K
R105
2.2K
R104
470
R10
20

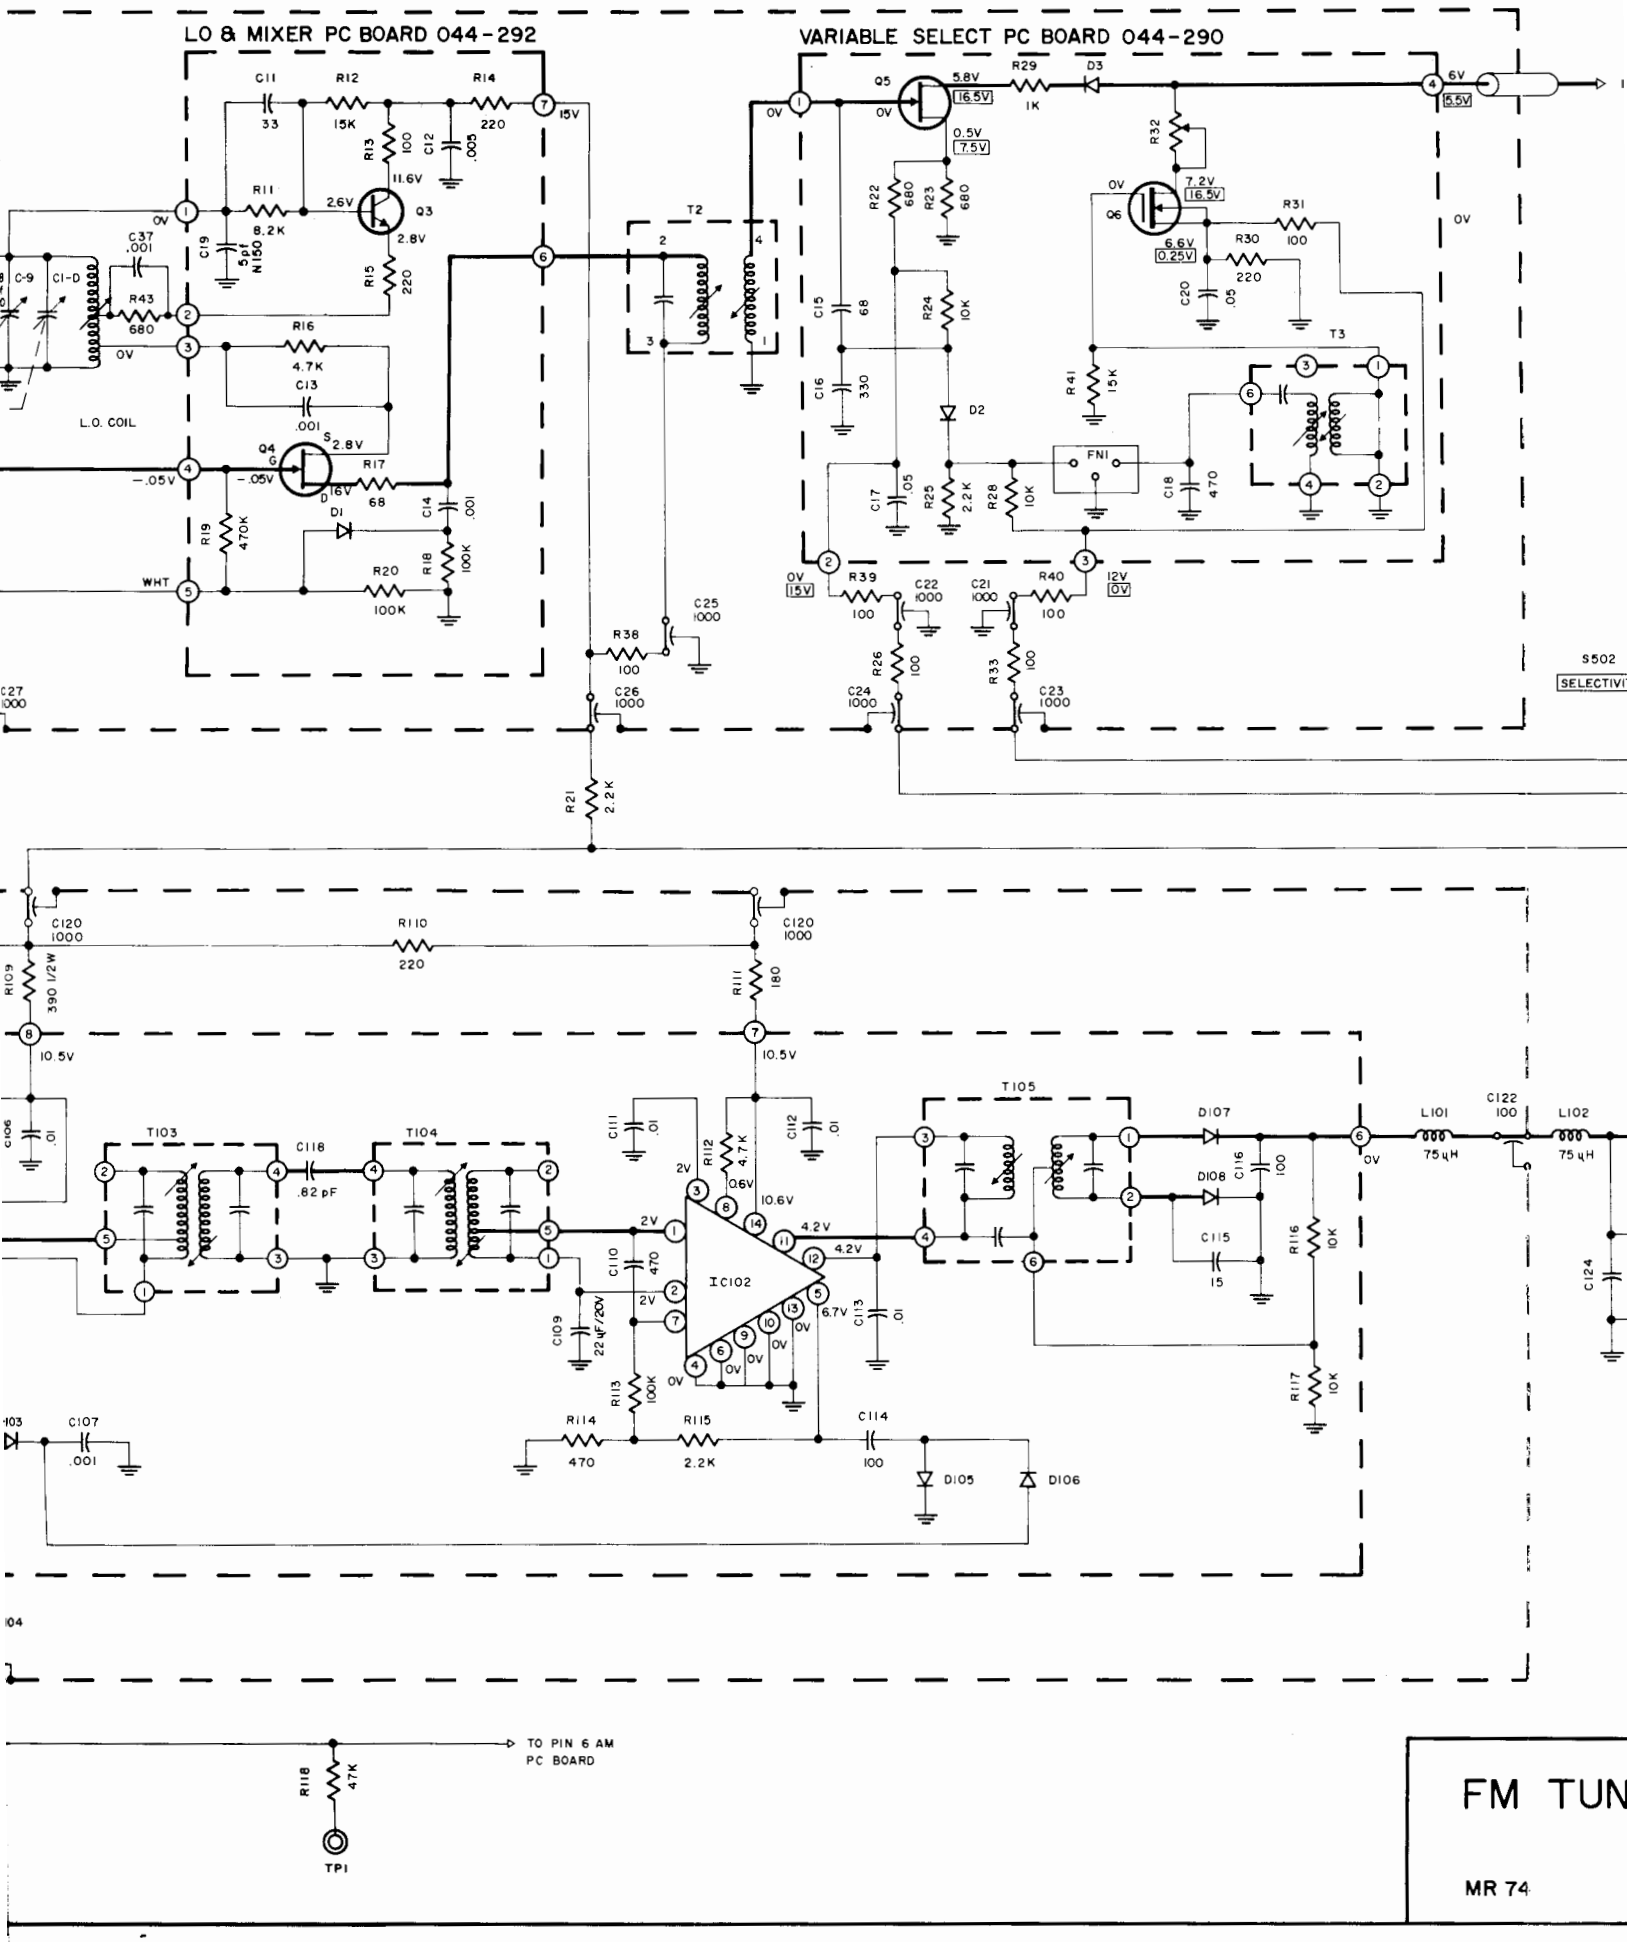
LO & MIXER PC BOARD 044-292
VARIABLE SELECT PC BOARD 044-290
L.O. COIL
T2
T3
T103
T104
T105
IC102
FN1
D1
D2
D3
D105
D106
D107
D108
Q3
Q4
Q5
Q6
TO PIN 6 AM PC BOARD
TP1
FM TUN
MR 74

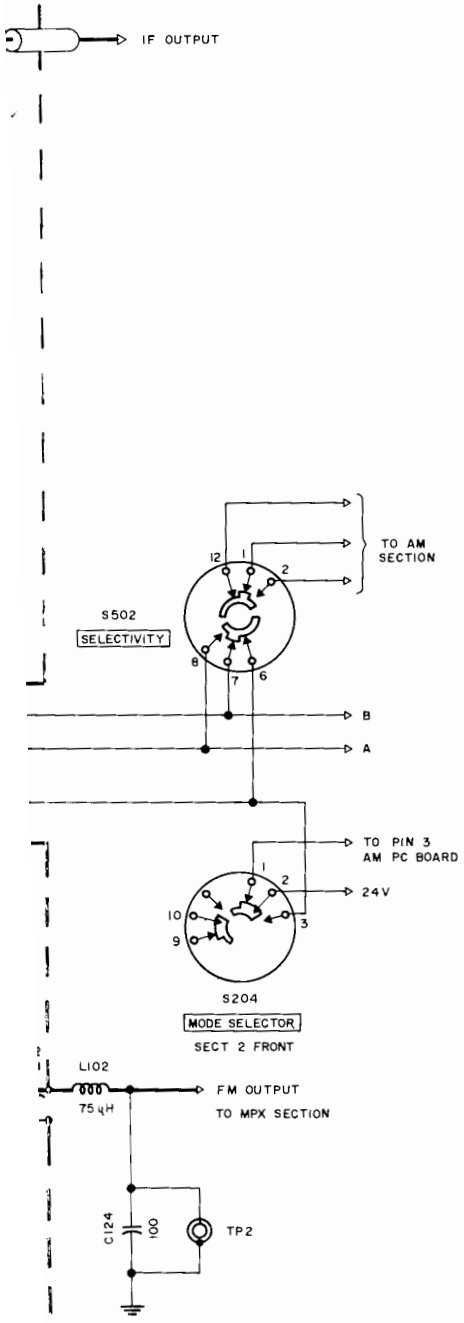

SELECTIVITY PC BOARD 044-290

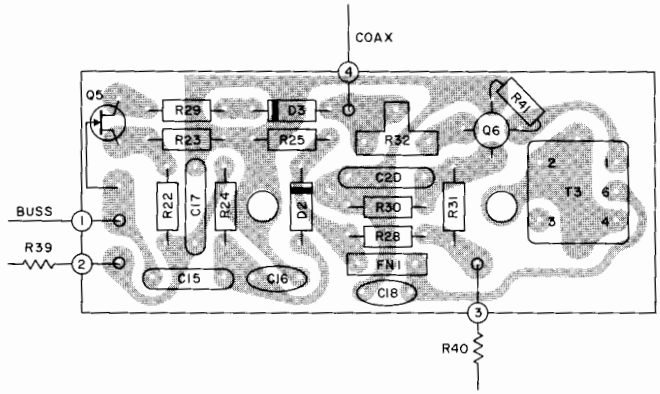

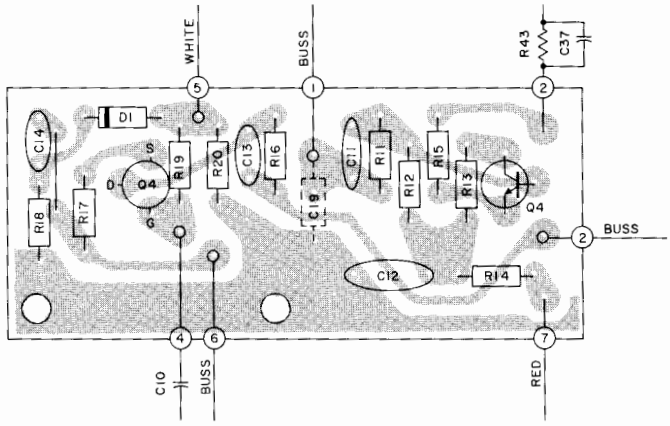

MIXER & LOCAL OSCILLATOR PC BOARD 044-292

TUNER SECTION

154-522

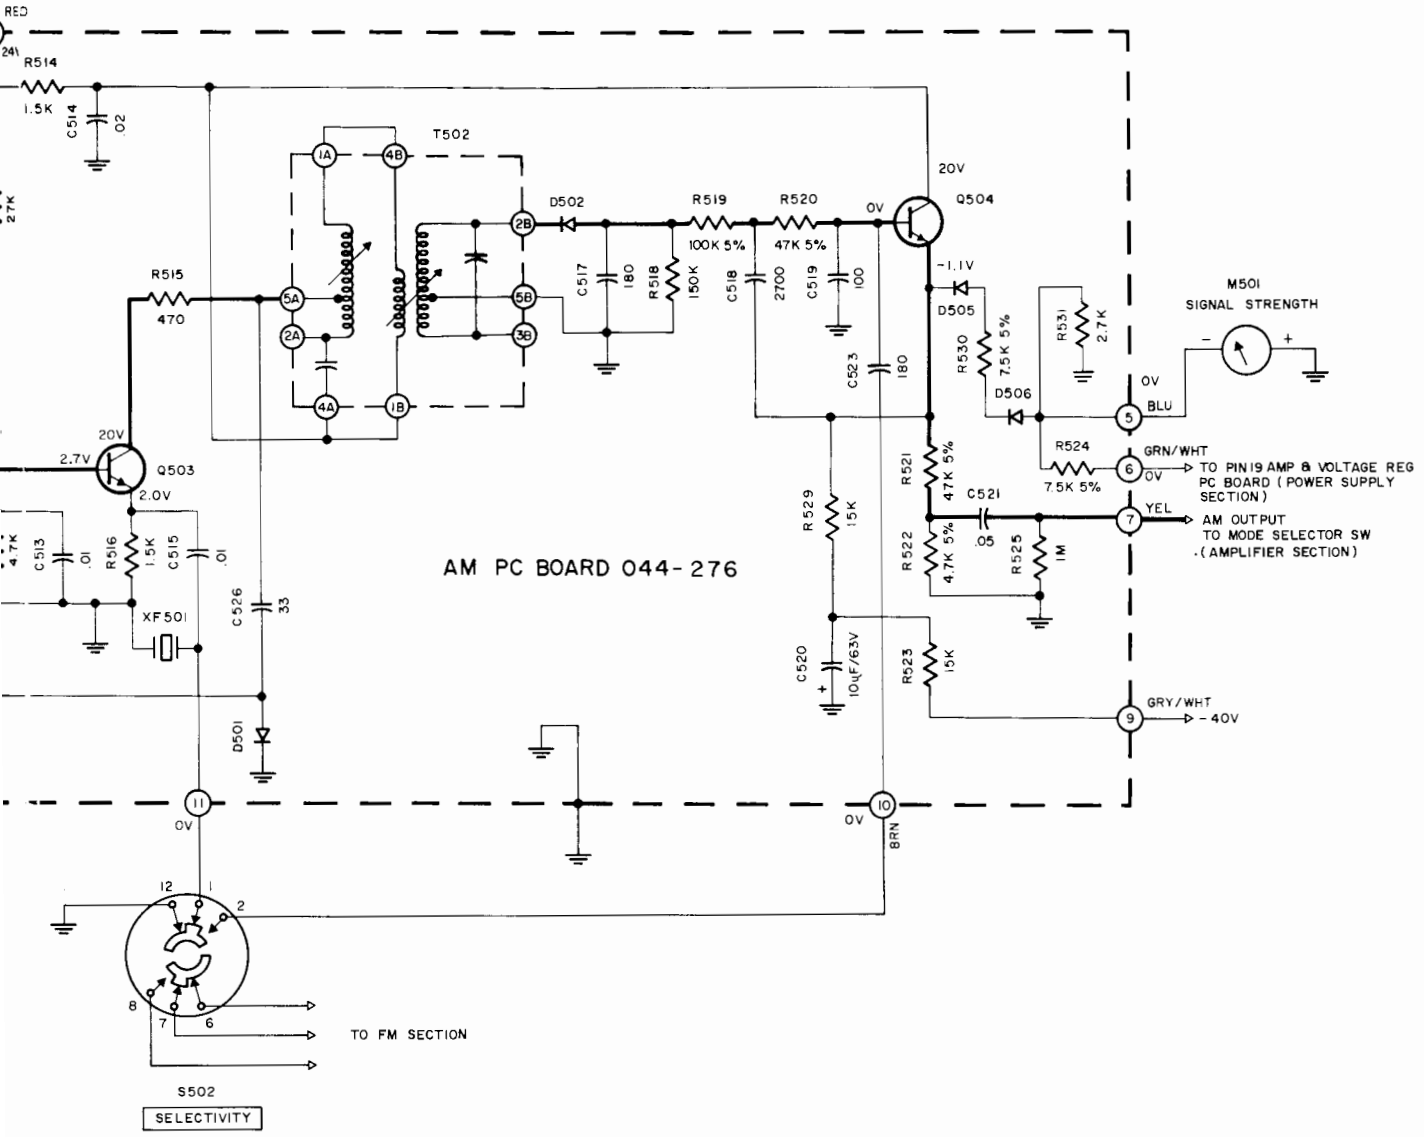

AM SECTION

MR 74

154 - 523

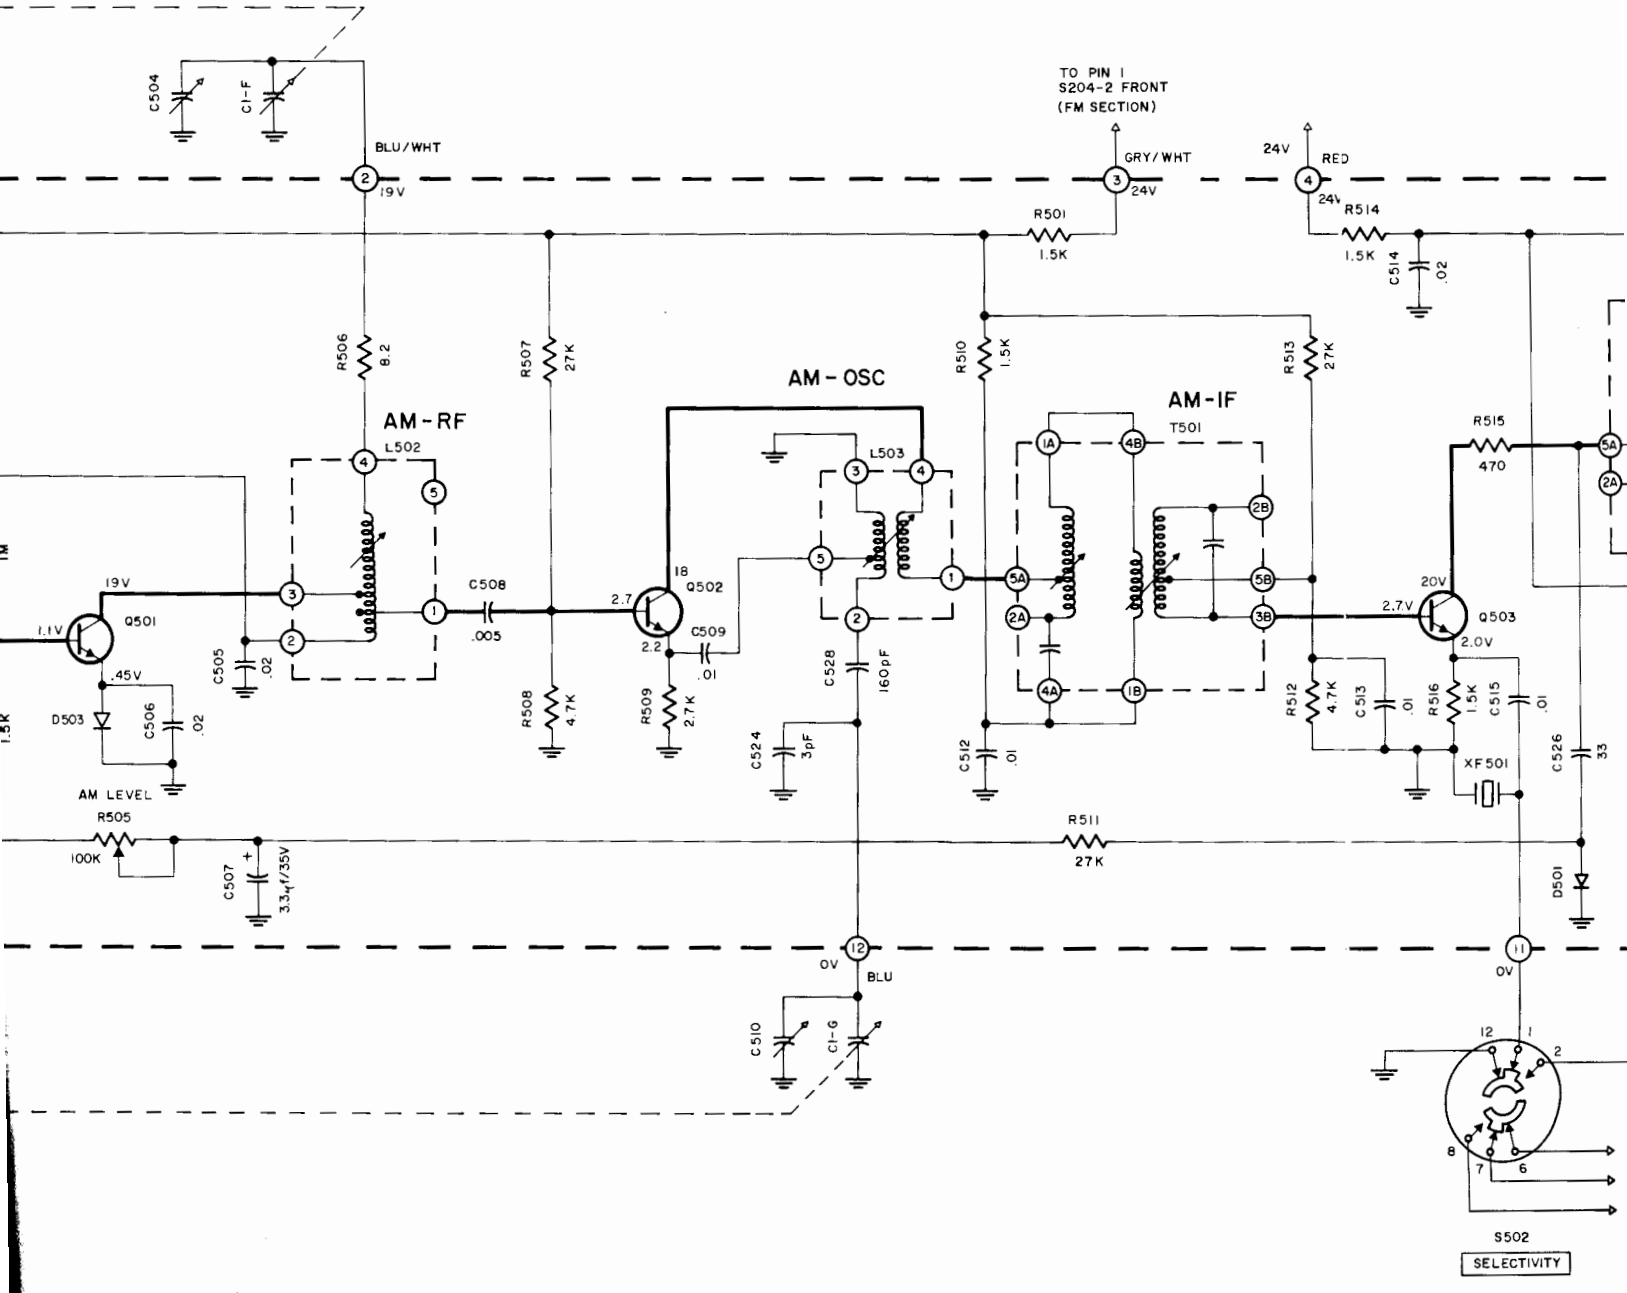
C504
C1-F
BLU/WHT
19V
TO PIN 1
S204-2 FRONT
(FM SECTION)
GRY/WHT
24V
RED
24V
R501
1.5K
R514
1.5K
C514
.02
R506
8.2
R507
27K
AM-RF
L502
AM-OSC
L503
R510
1.5K
R513
2.7K
AM-IF
T501
R515
470
19V
1.1V
Q501
C508
.005
18
2.7
Q502
2.2
C509
.01
C505
.02
R508
4.7K
R509
2.7K
C528
160pF
C524
3pF
C512
.01
20V
2.7V
Q503
2.0V
R512
4.7K
C513
.01
R516
1.5K
C515
.01
XF501
C526
33
.45V
D503
C506
.02
AM LEVEL
R505
100K
C507
3.3µf/35V
R511
27K
D501
0V
BLU
C510
C1-G
0V
S502
SELECTIVITY

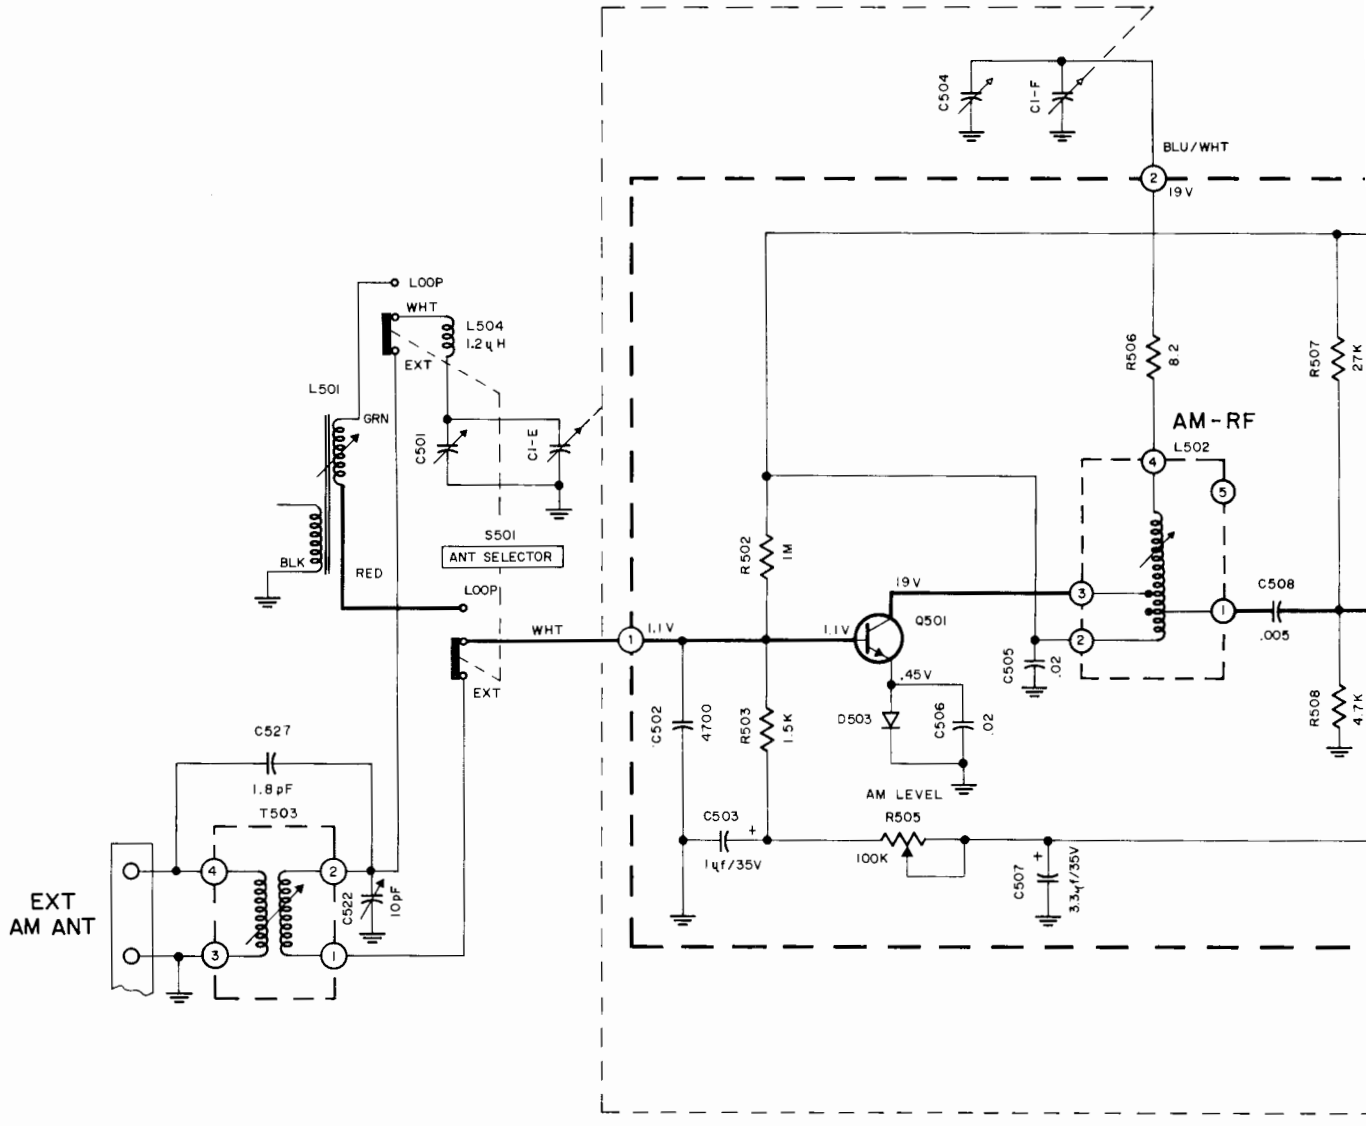
C504
C1-F
BLU/WHT
19V
LOOP
WHT
L504
1.2μH
EXT
L501
GRN
C501
C1-E
S501
ANT SELECTOR
BLK
RED
LOOP
WHT
EXT
R506
8.2
R507
27K
AM-RF
L502
R502
1M
19V
1.1V
1.1V
Q501
.45V
C505
.02
C508
.005
R508
4.7K
C502
4700
R503
1.5K
D503
C506
.02
AM LEVEL
C503
1μf/35V
R505
100K
C507
3.3μf/35V
C527
1.8pF
T503
C522
10pF
EXT
AM ANT

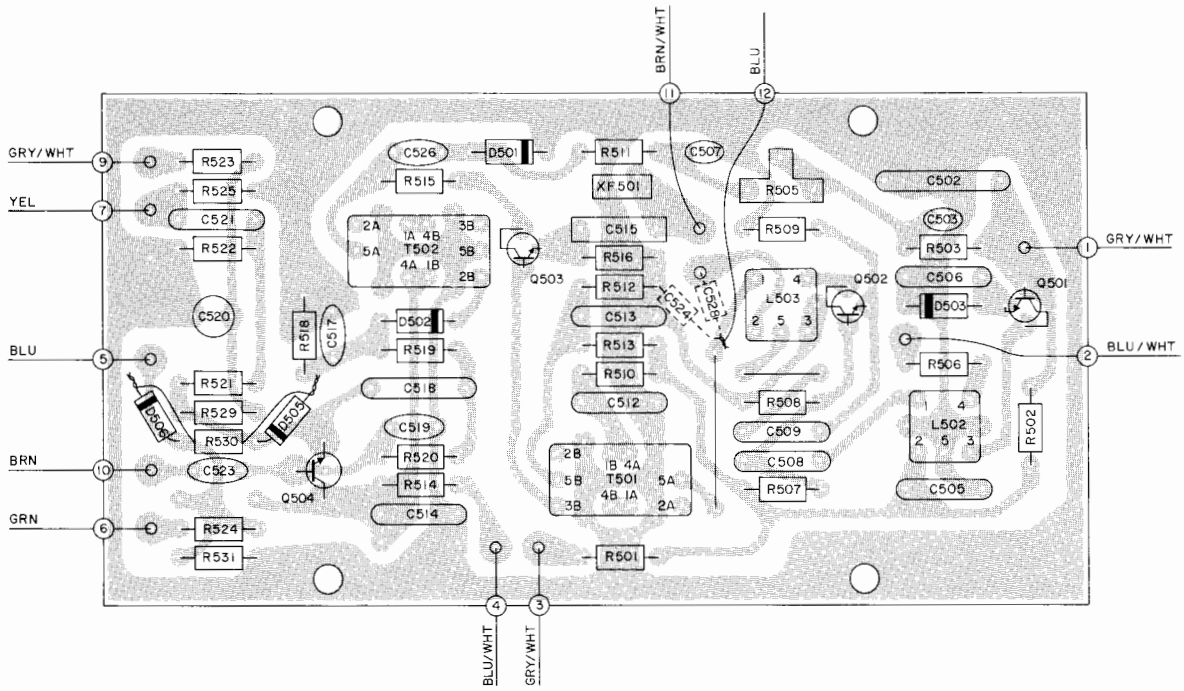

AM PC BOARD 044-276

MPX PC BOARD 044-299

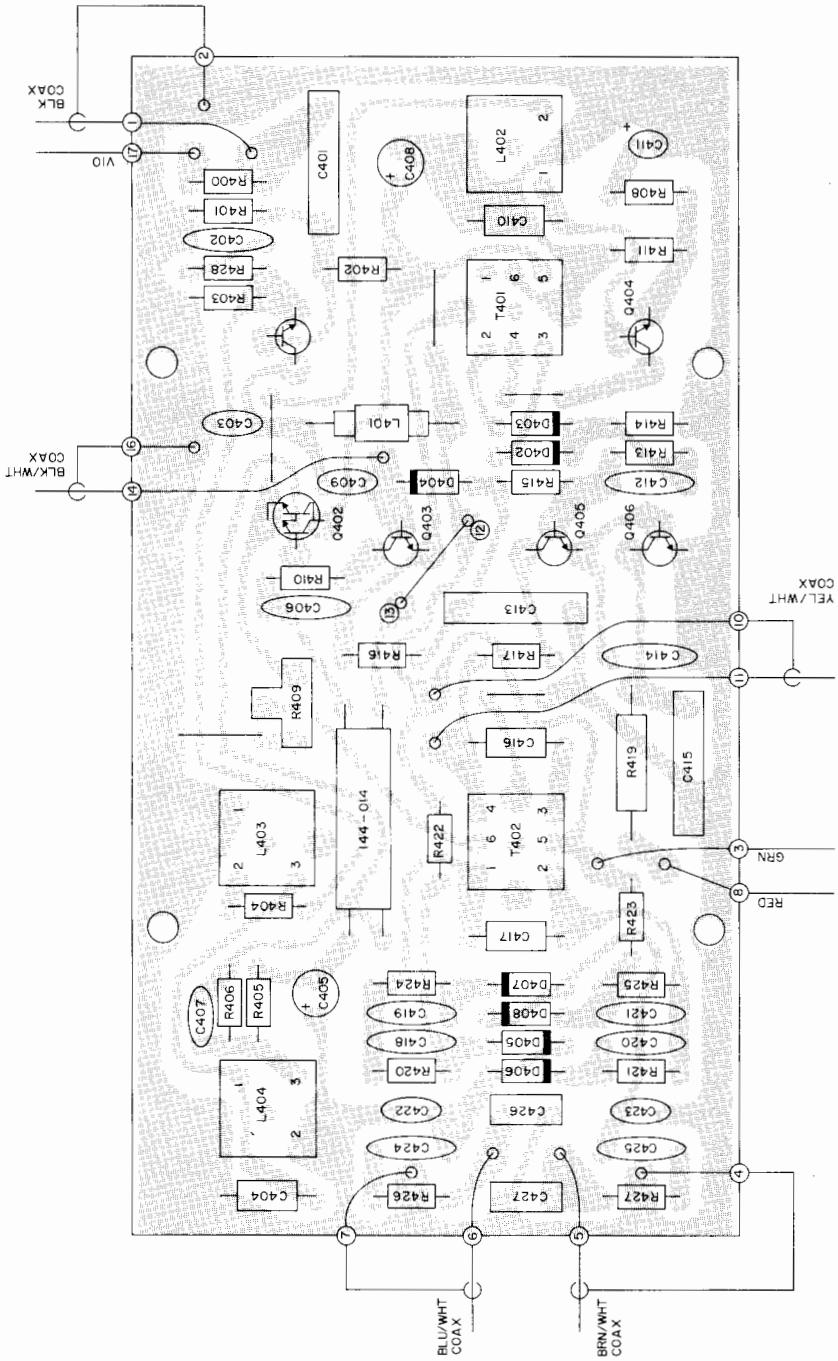

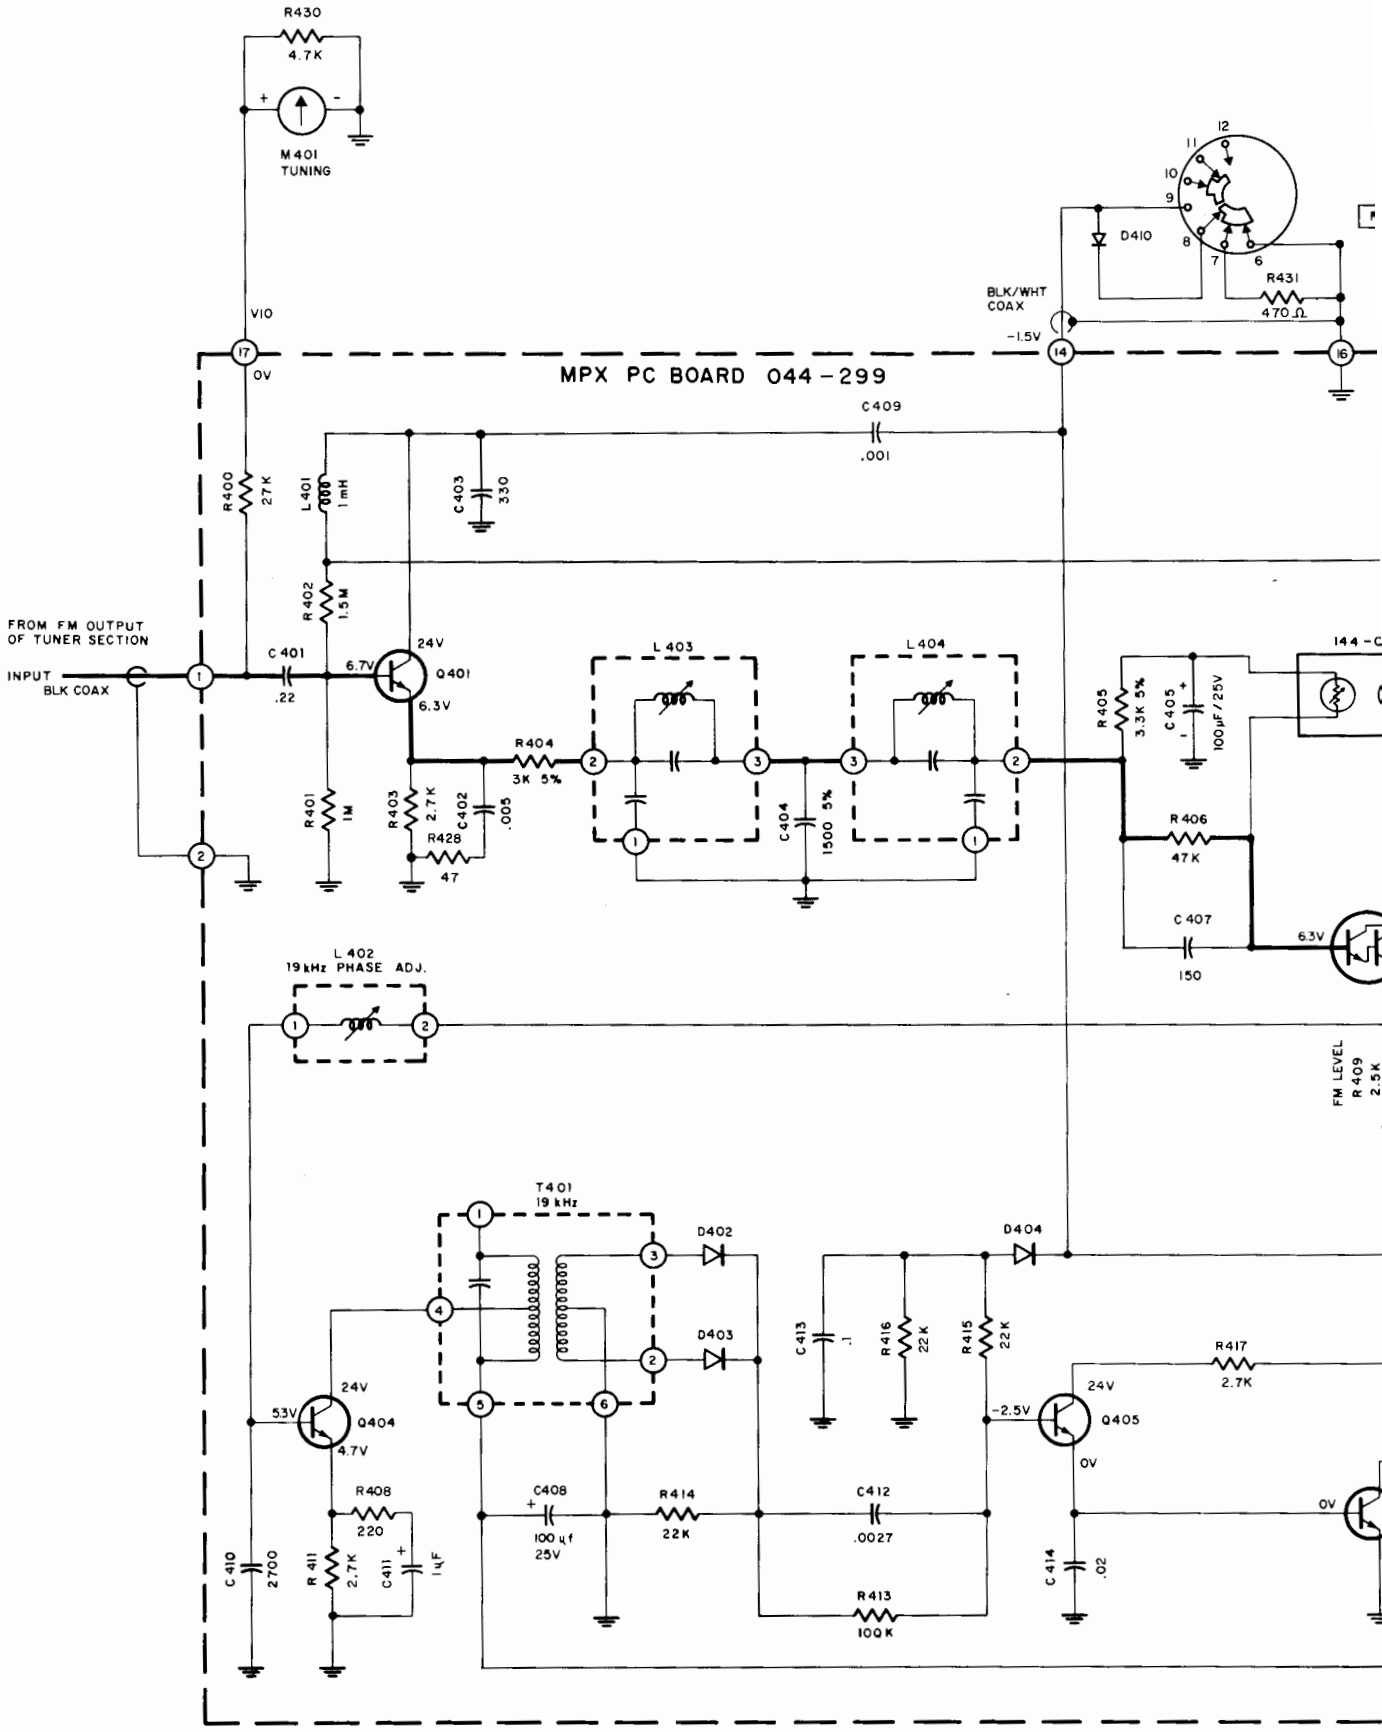
R430
4.7K
M401
TUNING
V10
17
0V
MPX PC BOARD 044-299
D410
R431
470Ω
BLK/WHT
COAX
-1.5V
14
16
C409
.001
R400
27K
L401
1mH
C403
330
R402
1.5M
FROM FM OUTPUT
OF TUNER SECTION
INPUT
BLK COAX
C401
.22
24V
6.7V
Q401
6.3V
L403
L404
R404
3K 5%
R401
1M
R403
2.7K
C402
.005
R428
47
C404
1500 5%
R405
3.3K 5%
C405
100μF/25V
R406
47K
C407
150
6.3V
L402
19kHz PHASE ADJ.
T401
19kHz
D402
D403
D404
C413
.1
R416
22K
R415
22K
R417
2.7K
24V
5.3V
Q404
4.7V
-2.5V
Q405
0V
R408
220
C408
100μf
25V
R414
22K
C412
.0027
C410
2700
R411
2.7K
C411
1μF
R413
100K
C414
.02
FM LEVEL
R409
2.5K

MPX SECTION

MR74 154 - 520

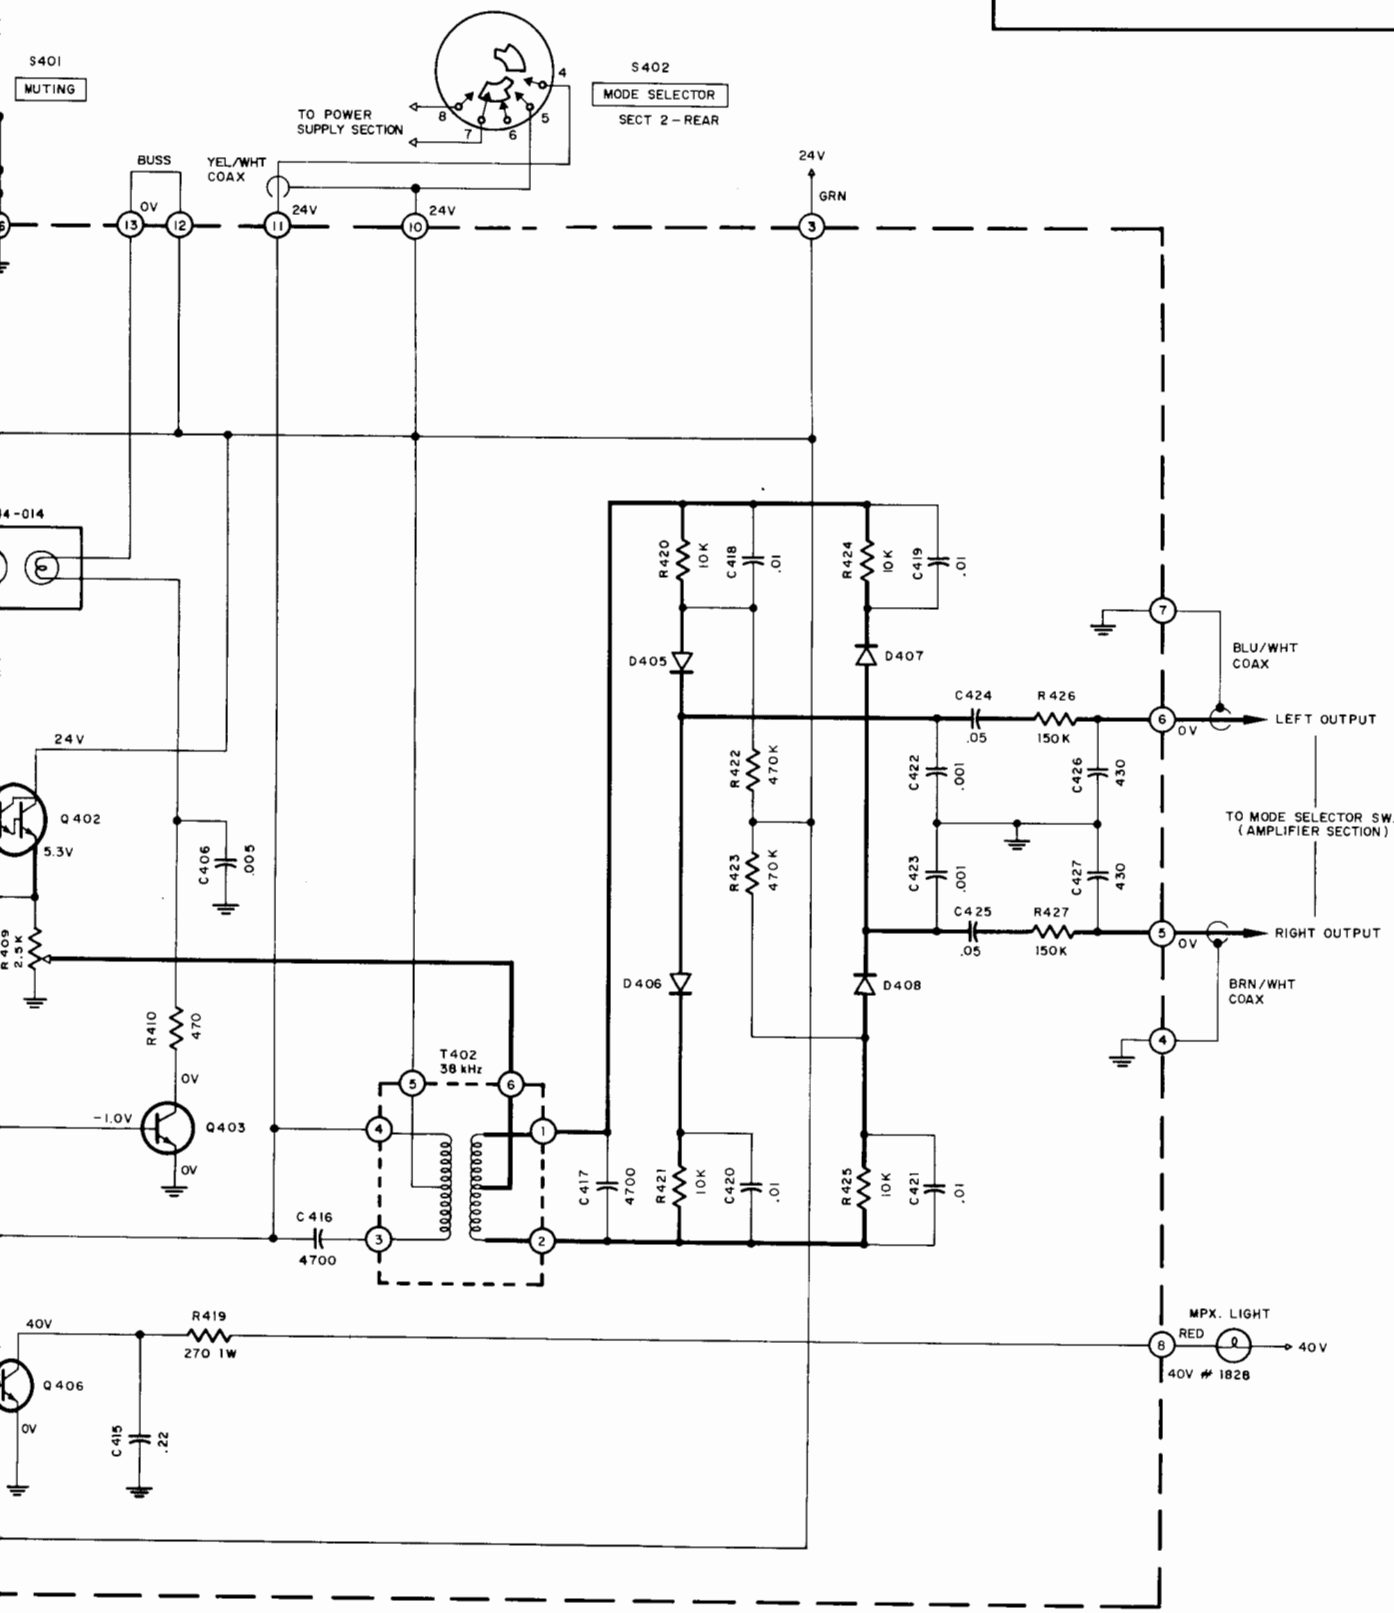

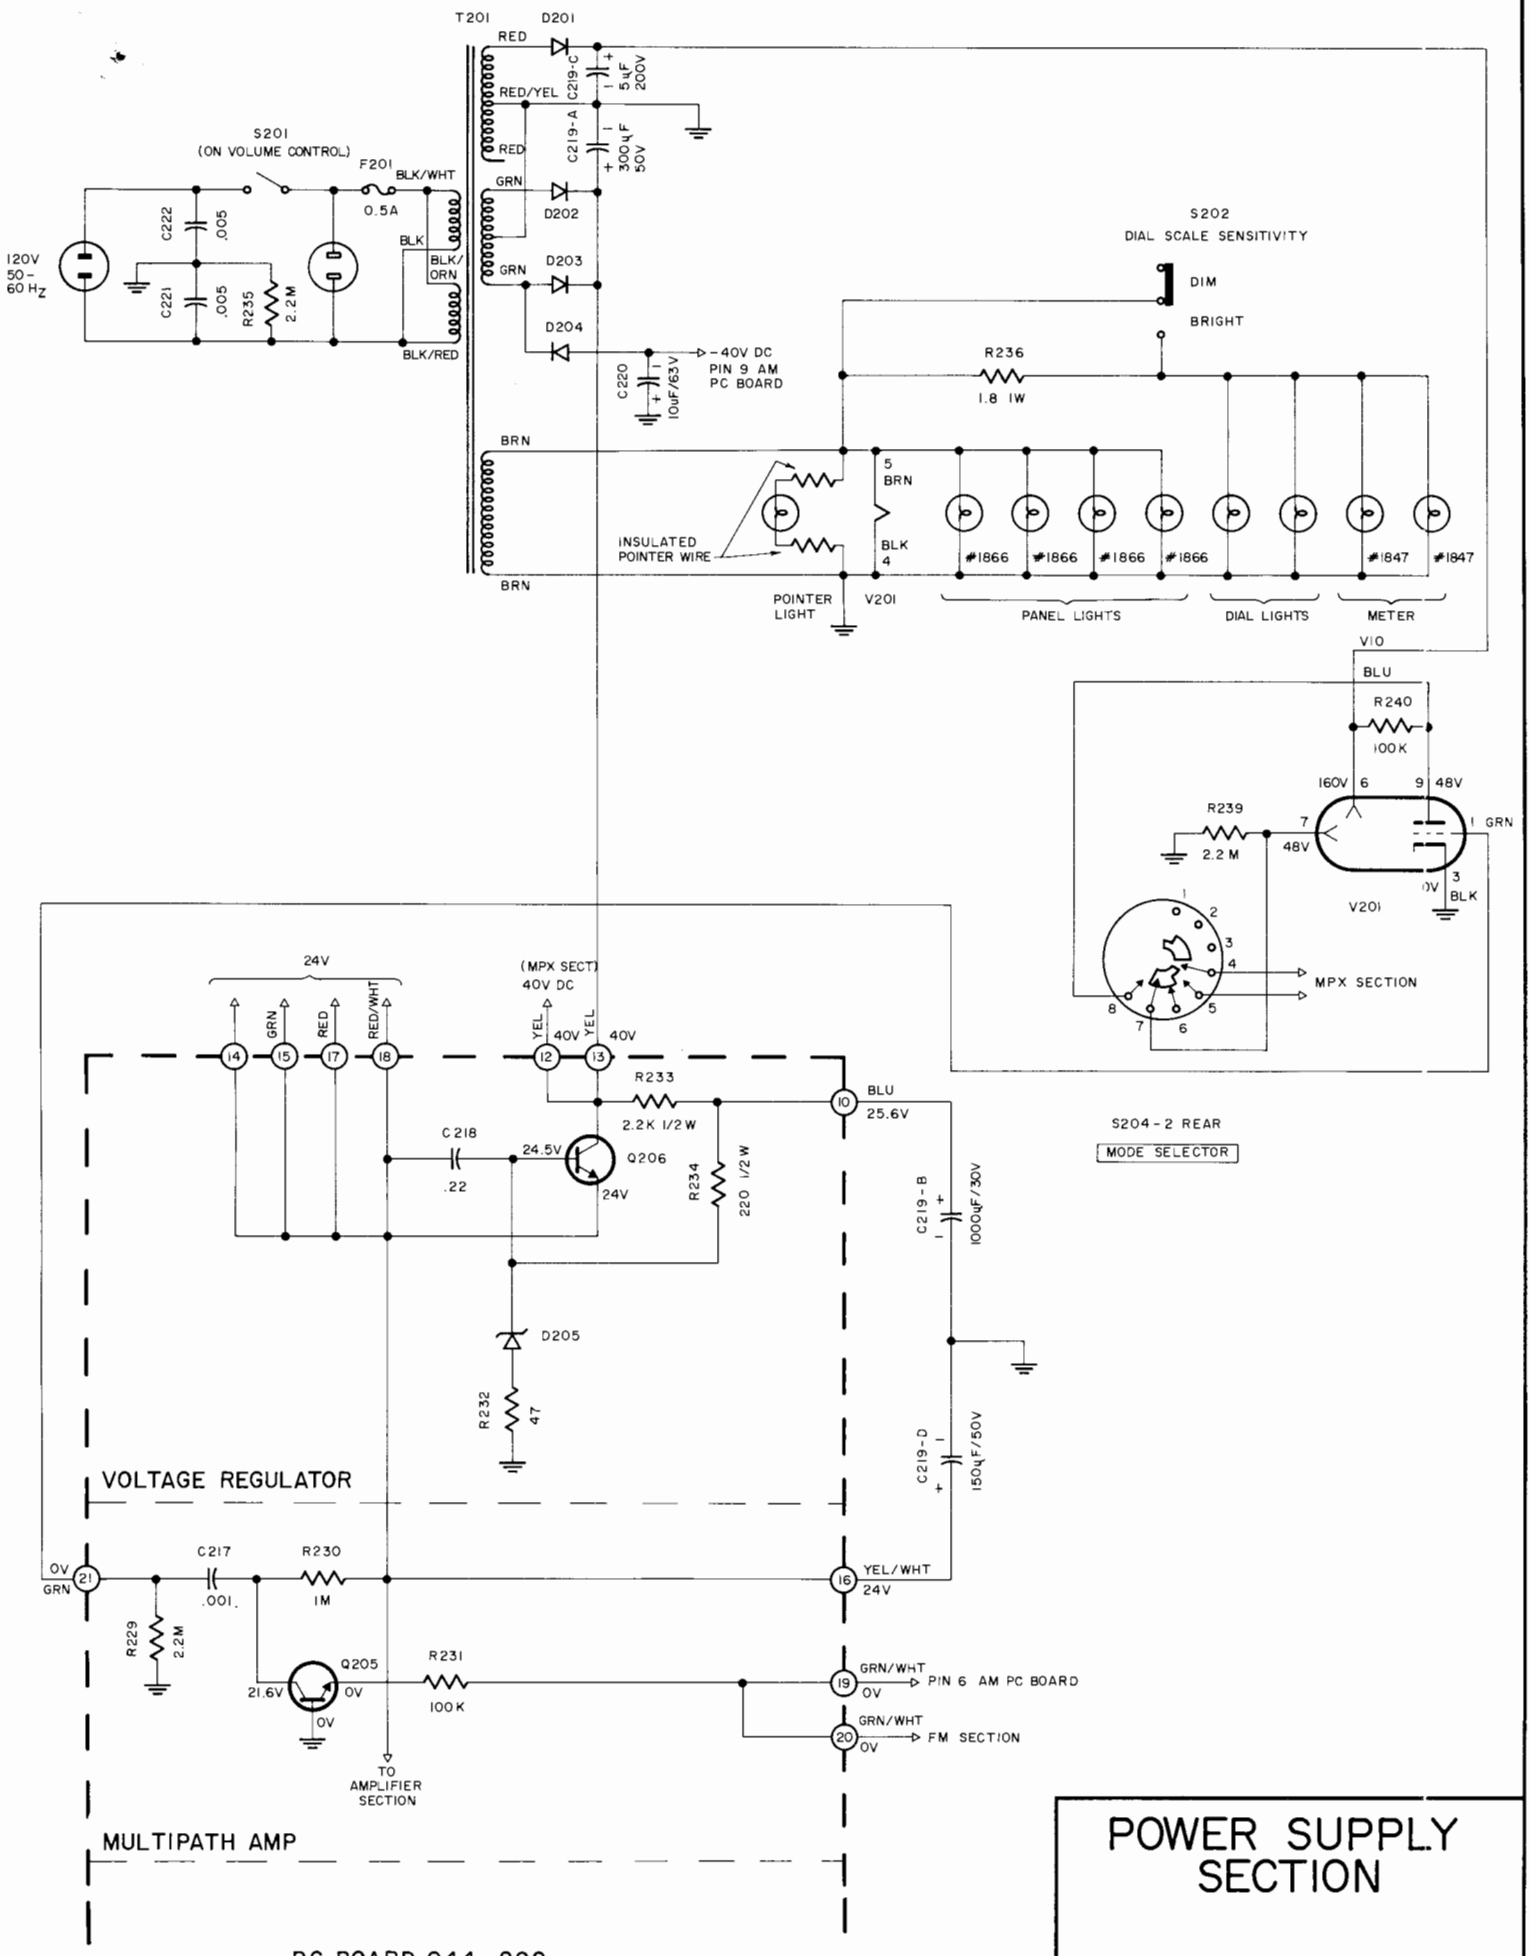

PC BOARD 044-298

POWER SUPPLY SECTION

MR74 154-521

POWER SUPPLY & OUTPUT PC BOARD 044-298

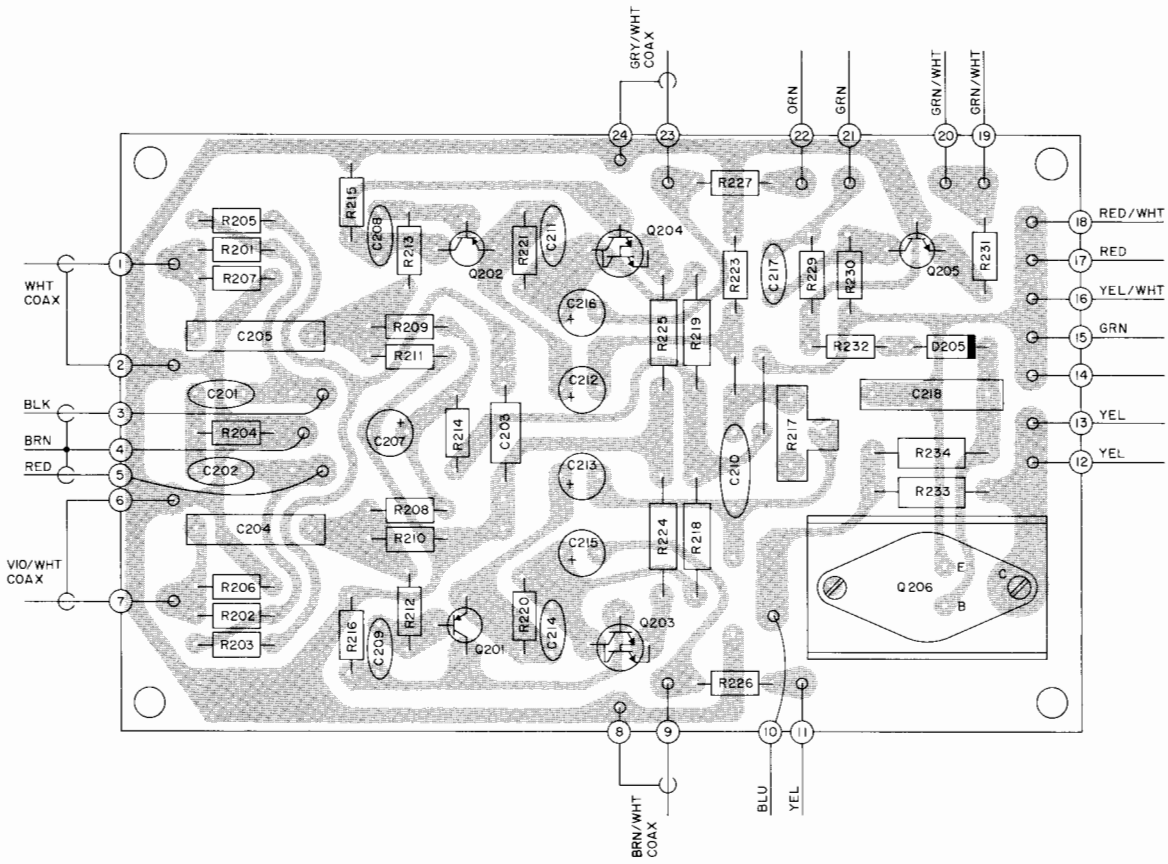

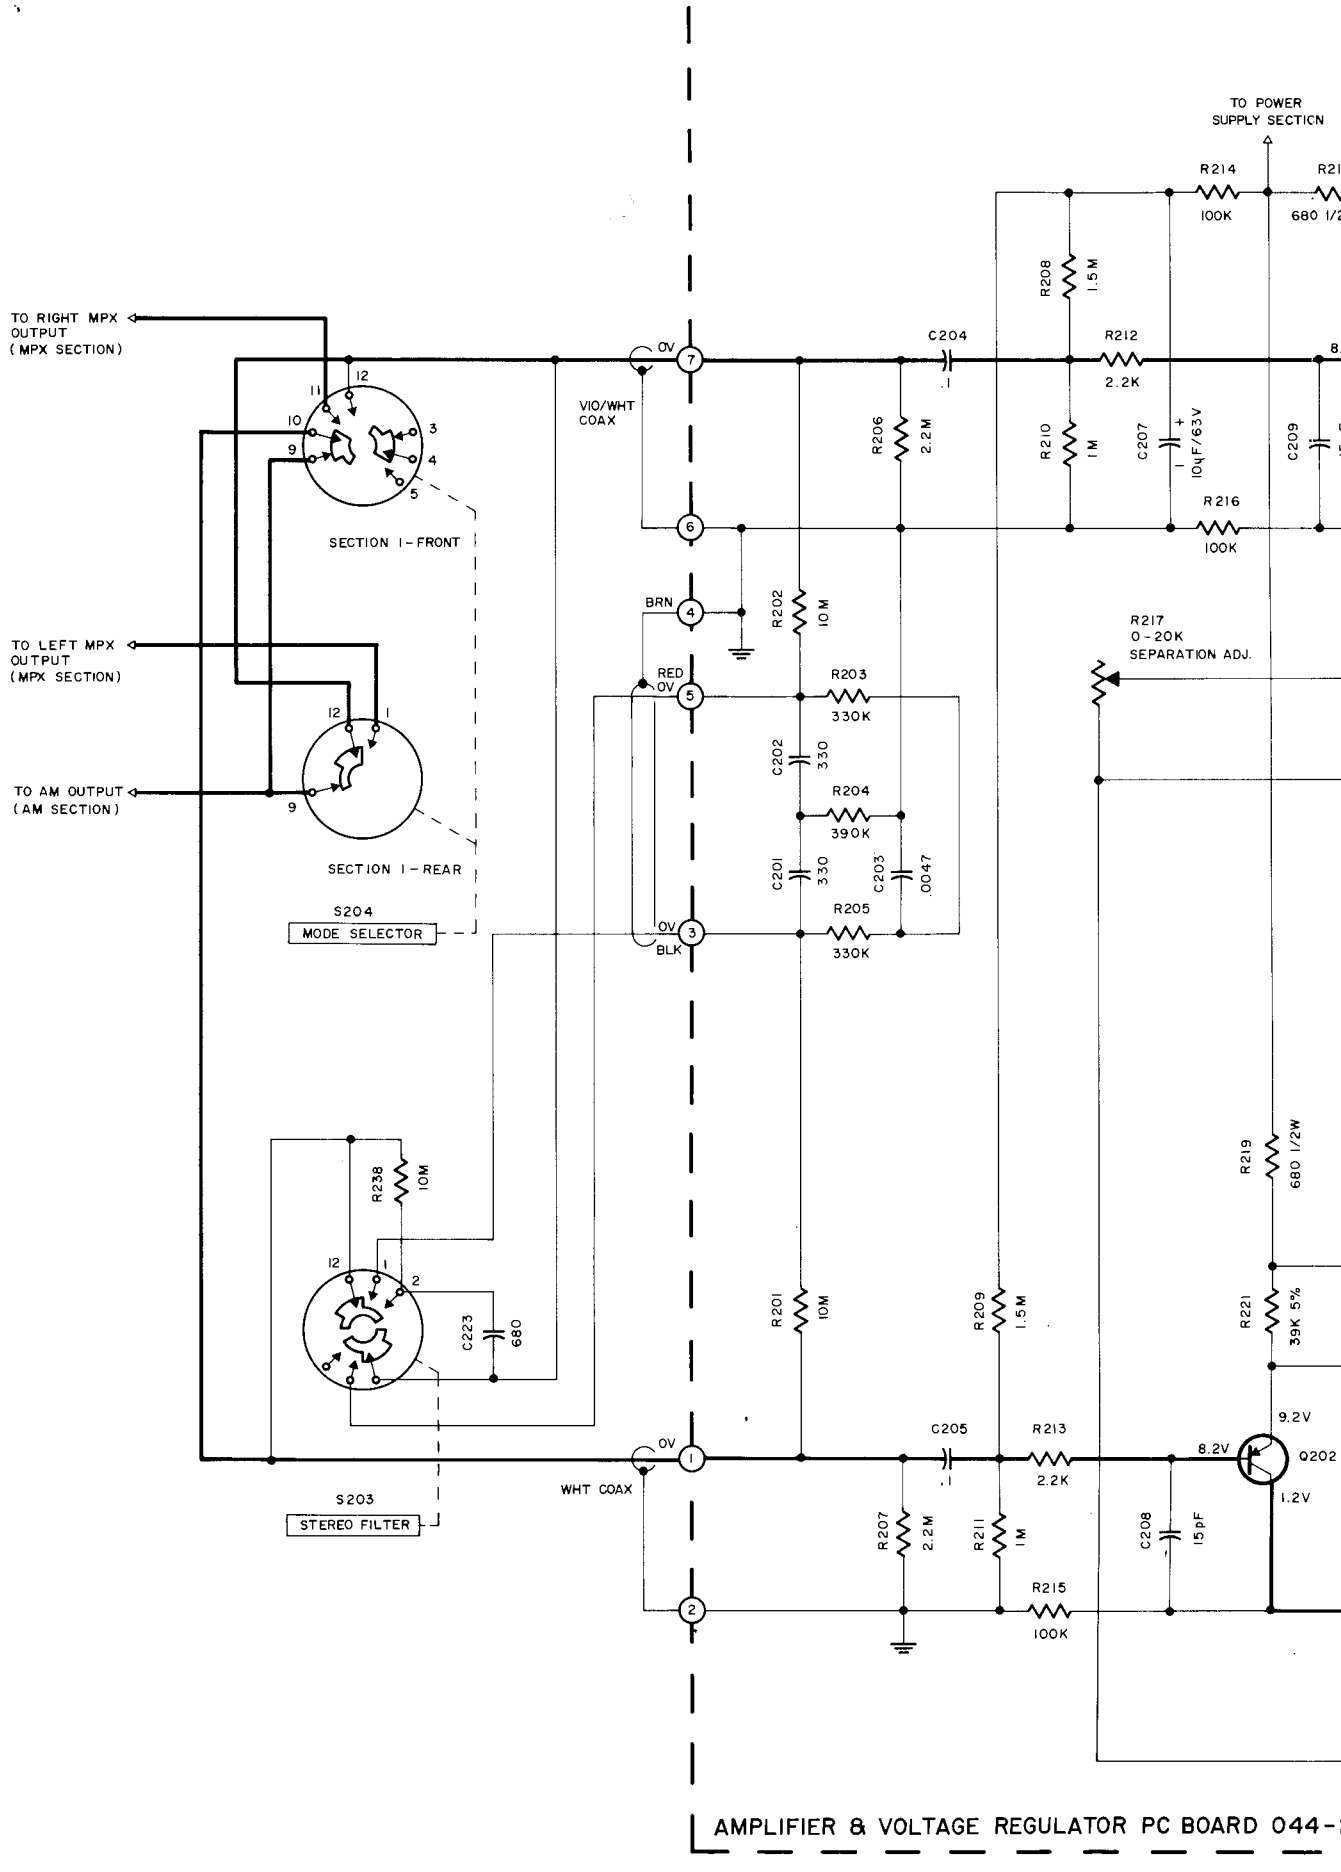
TO POWER SUPPLY SECTION
R214
100K
R208
1.5 M
C204
.1
R212
2.2K
TO RIGHT MPX OUTPUT (MPX SECTION)
VIO/WHT COAX
R206
2.2M
R210
1M
C207
10µF/63V
C209
R216
100K
SECTION 1-FRONT
BRN
R202
10M
R217
0-20K
SEPARATION ADJ.
TO LEFT MPX OUTPUT (MPX SECTION)
RED
R203
330K
C202
330
R204
390K
TO AM OUTPUT (AM SECTION)
C201
330
C203
.0047
SECTION 1-REAR
S204
MODE SELECTOR
R205
330K
BLK
R219
680 1/2W
R238
10M
R201
10M
R209
1.5M
R221
39K 5%
C223
680
9.2V
C205
.1
R213
2.2K
8.2V
Q202
1.2V
S203
STEREO FILTER
WHT COAX
R207
2.2M
R211
1M
C208
15pF
R215
100K
AMPLIFIER & VOLTAGE REGULATOR PC BOARD 044-

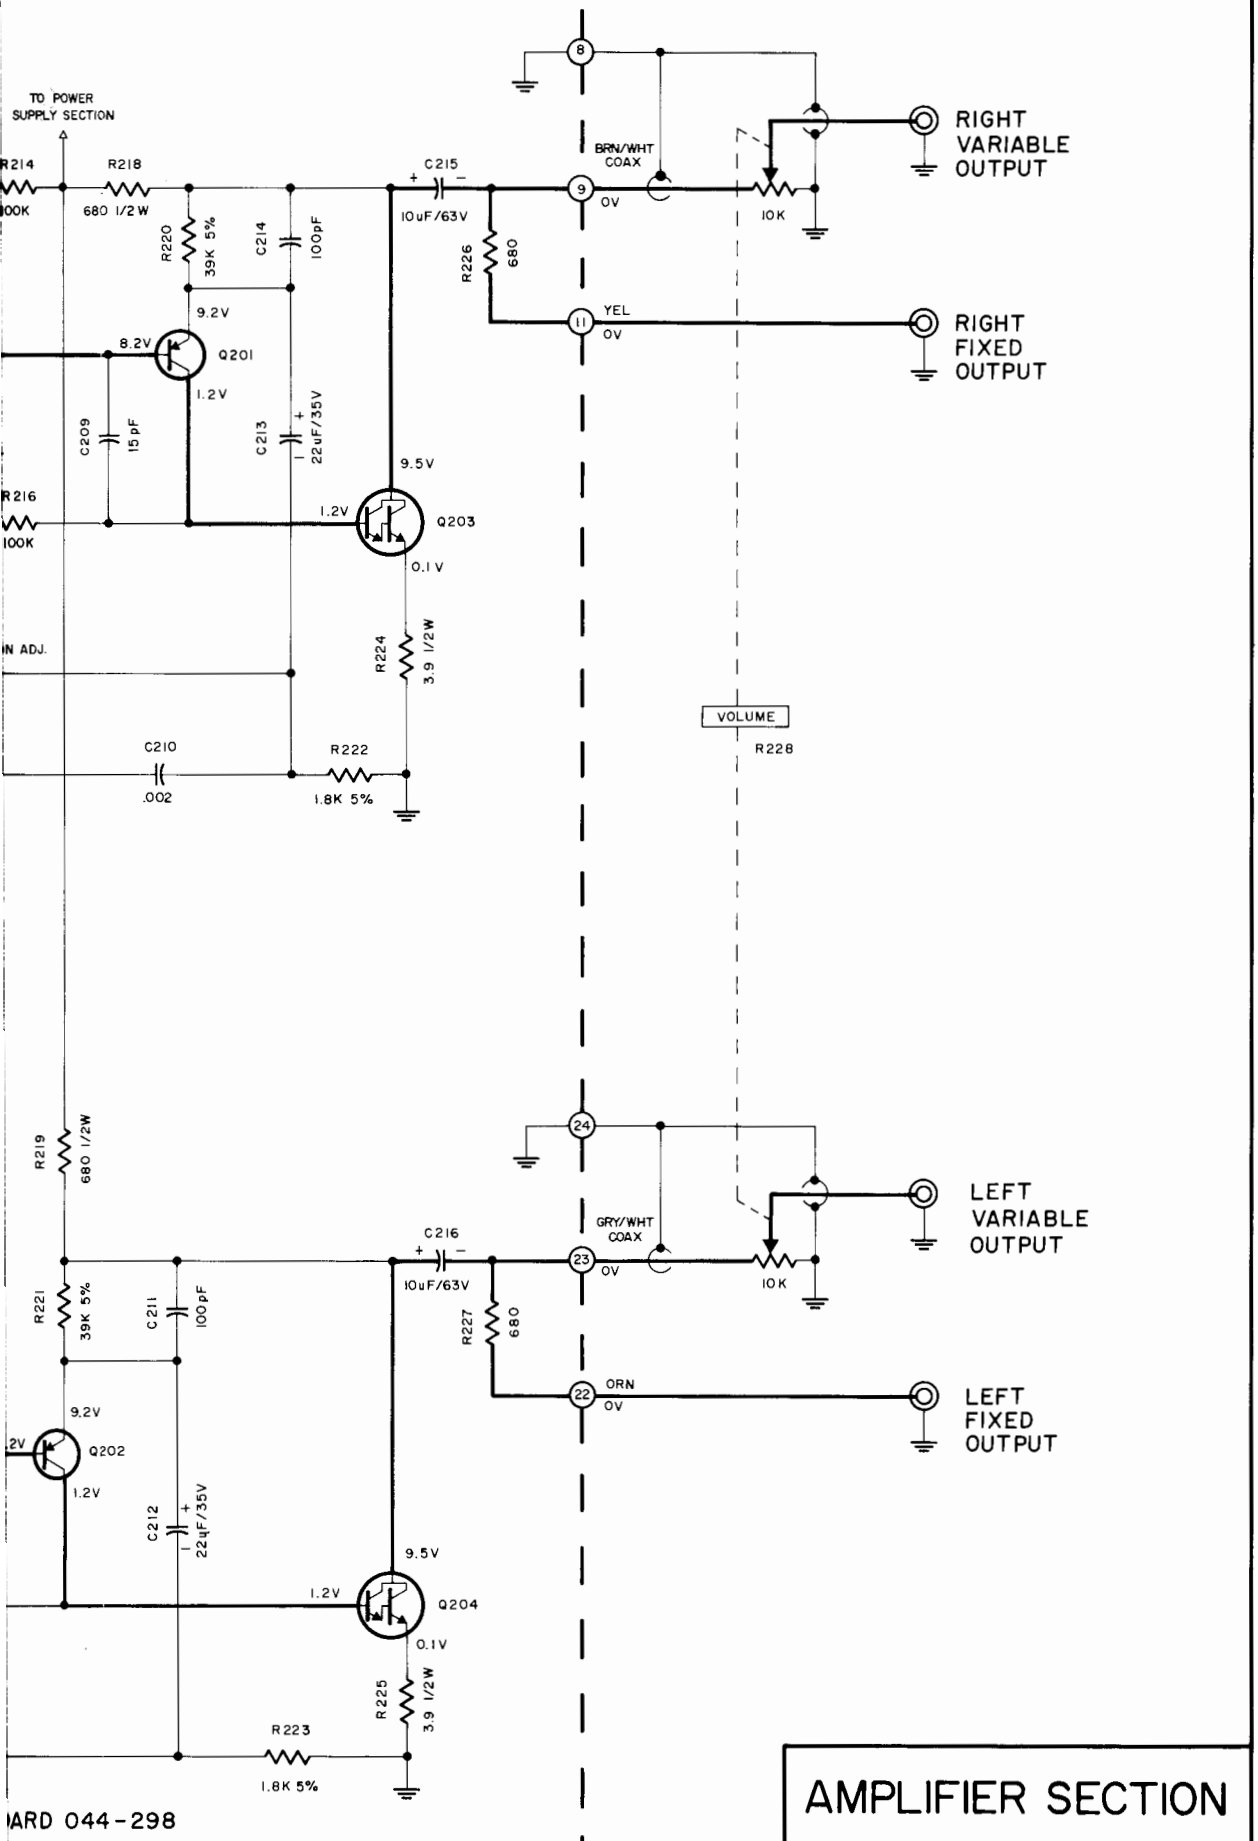

AMPLIFIER SECTION

MR74

154-519

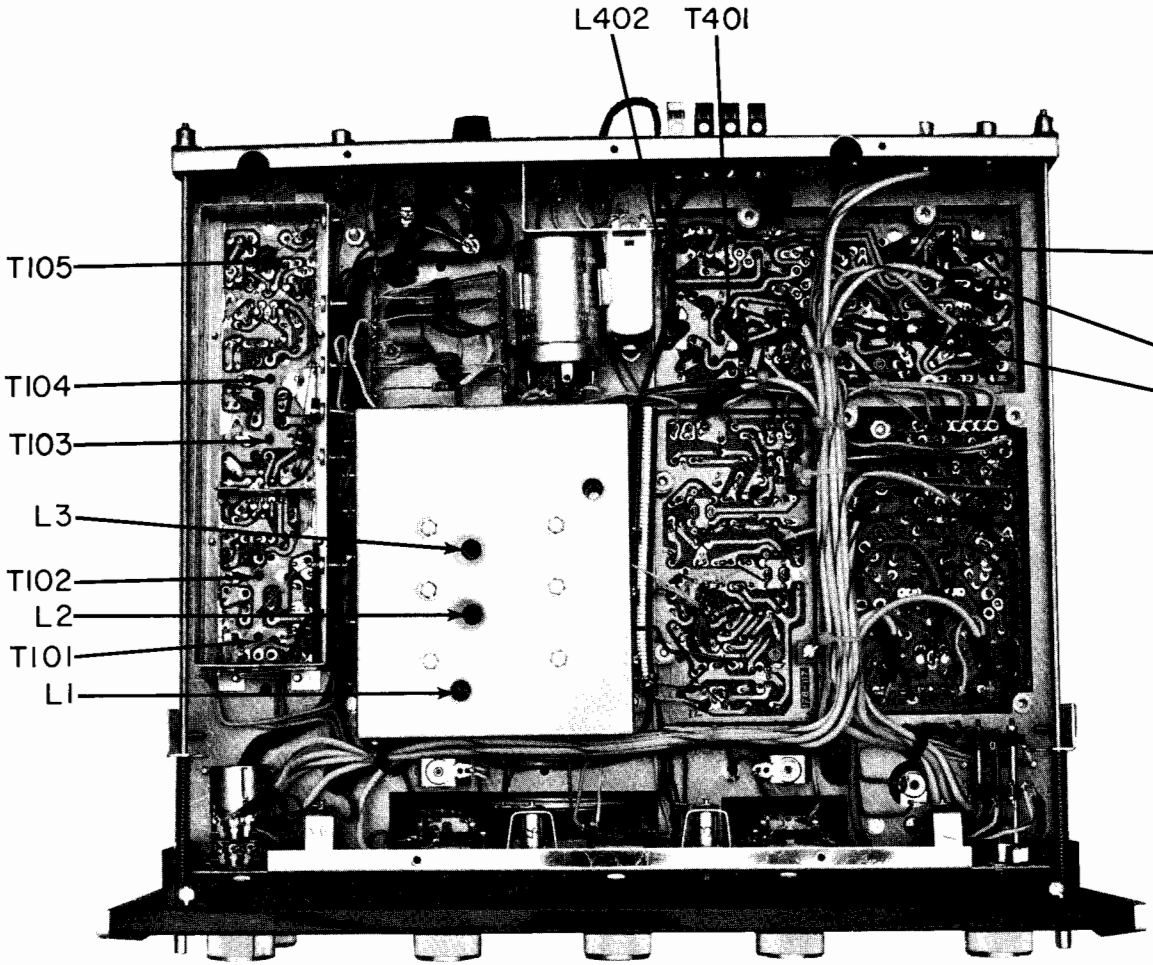
L402
T401
T105
T104
T103
L3
T102
L2
T101
L1
L404
L403
T402

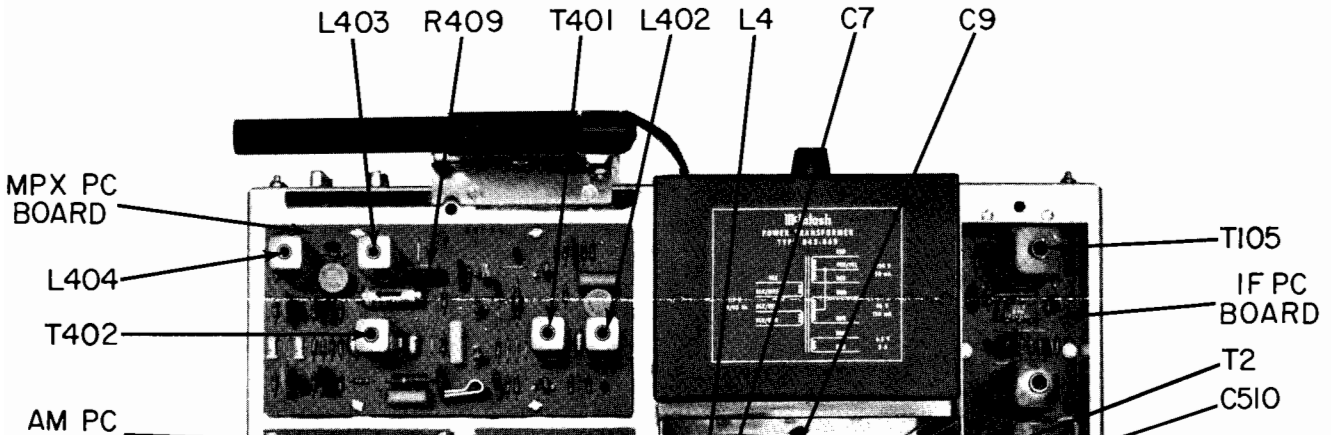
L403
R409
T401
L402
L4
C7
C9
MPX PC BOARD
L404
T402
AM PC
T105
IF PC BOARD
T2
C510

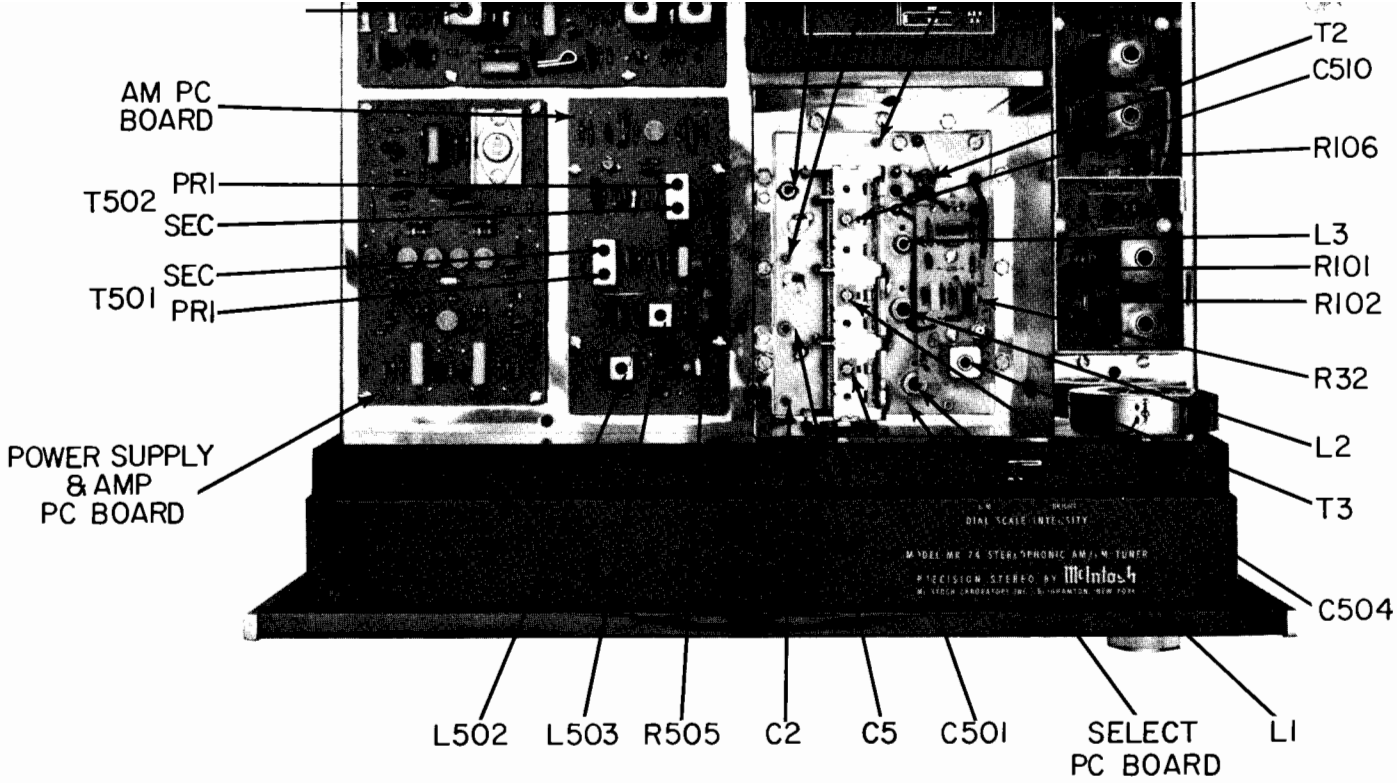

MR 74 ALIGNMENT INSTRUCTIONS

All McIntosh tuners are carefully aligned and tested at the factory using the finest available test equipment. All McIntosh tuners will meet their published specifications when shipped from the factory.

After extensive operation, or servicing, it may be desirable to realign the tuner circuits for best performance. The charts below give complete information on the circuit realignment procedure for the MR 74.

The test equipment listed (or its equivalent) is necessary to properly align an MR 74. The accuracy of the alignment will be directly related to the accuracy and calibration of the test equipment used.

If the necessary test equipment is not available, alignment should not be attempted. For additional information, contact Customer Service Department, McIntosh Laboratory, Inc., 2 Chambers Street, Binghamton, New York 13903 (telephone 607-723-3512).

Alignment should be done in the following order: AM-FM-MPX.

TEST EQUIPMENT REQUIRED

1. AM Signal Generator (Measurement 65B or equivalent).
2. FM Signal Generator (Measurement 188 or Sound Technology 1000A).
3. VTVM (RCA WV98C).
4. Multiplex Generator (Radiometer SMG1) or Sound Technology 1000A.
5. 10.7 MHz FM Sweep Generator (Kay 385 or equivalent). (Not needed if Measurement 275 IF converter is available.)
6. 10.7 MHz Generator (preferably crystal controlled).
7. Oscilloscope (Hewlett-Packard 120B or equivalent).
8. Harmonic Distortion Analyzer (Hewlett-Packard 333A or equivalent).
9. 10.7 MHz $\pm$75 kHz Sweep Marker Generator.

AM ALIGNMENT

	TUNER DIAL SETTING	SIGNAL GENERATOR			INDICATOR		ADJUST	TEST LIMITS	REMARKS
		FREQ.	COUPLING	MODULATION	TYPE	CONNECTED TO			
1	Point of no interference or signal	455kHz	Through external .01µF capacitor to Pin 2 on AM circuit board	CW	Signal strength meter.	Normal	Pri. & Sec. cores of T501 & T502	Maximum possible indication	As the tuner output increases, attenuate generator output to keep meter indication below 4. Selectivity switch remains in narrow position.
2	600kHz	600kHz	Through a 200pF capacitor to ant. terminals.	Same	Same	Same	L503 (oscillator coil.)	Same	Same as Step 1.
3	1400kHz	1400kHz	Same	Same	Same	Same	C510 (oscillator trimmer)	Same	Repeat Steps 2 & 3 until dial calibration is accurate.
4	600kHz	600kHz	Same	Same	Same	Same	L501 (AM antenna rod) & L502 (AM-RF)	Same	Same as Step 1 except adjust generator so that output signal is just above the noise level. Position antenna rod away from chassis and nearby objects.
5	1400kHz	1400kHz	Same	Same	Same	Same	C501 (AM antenna trimmer) & C504 (AM-RF trimmer).	Same	Repeat Steps 4 & 5 until output is as high as possible.
6	600kHz	600kHz	Same	Same	Same	Same	T503 (AM external antenna transformer).		Same as Step 1.
7	1400kHz	1400kHz	Same	Same	Same	Same	C522 (AM external antenna trimmer).		Repeat Steps 6 & 7 until output is as high as possible.
8	1000kHz	1000kHz	Same	30% @ 400Hz	Distortion Analyzer	L or R fixed output jack.	R505 AM level.	With a distortion analyzer, the following measurements can be performed: 1. With a 10mV input signal adjust "AM level" control for .75 volts of audio output at fixed outputs. This will correspond to 2.5 volts audio output for a 100% modulated signal. 2. With a 1mV input signal, harmonic distortion, whistle filter attenuation at 10kHz modulating frequency and signal to noise ratio may be measured. 3. IHFM sensitivity of 75 microvolts for 20dB signal to noise ratio. (This measurement is only possible in the absence of man-made interference, as fluorescent lamps, etc.)		

								to noise ratio. (This measurement is only possible in the absence of man-made interference, as fluorescent lamps, etc.)

FM ALIGNMENT

STEP	TUNER DIAL SETTING	SIGNAL GENERATOR			INDICATOR		ADJUST	TEST LIMITS	REMARKS
		FREQ.	COUPLING	MODULATION	TYPE	CONNECTED TO			
1	Point of no interference.	10.7MHz	Through external .01µF capacitor to Q4 gate.	FM ±200kHz sweep @ 60Hz rate.	Oscilloscope	TP1	Top (Primary) and Bottom (Secondary) of T2.	Maximum height of 10.7MHz marker and best symmetry of 10.7MHz ±75kHz markers.	Selectivity switch must be in the normal position. Turn muting off for alignment tests. Keep signal generator output low to prevent limiting.
							Top (Primary) and Bottom (Secondary) of T3.		Selectivity switch must be in the "select" position. All further test and alignment steps selectivity switch in "normal" position. Adjust R32 for equal height of markers in both positions of "select" switch.
2	Same	Same	Same	Same	Same	Same	Top and Bottom cores of IF filters.	Same	The linear phase filters as employed in the IF do not have a flat-topped response. See typical response curve - Fig. 2. Do not stagger tune.
3	Same	Same	Same	C.W.	VTVM	TP2	Top (sec) core of T105.	Zero DC at TP2.	
4	Same	Same	Same	Same	Same	Pin 6 of T105	Bottom (Pri.) core of T105.	Maximum possible negative voltage.	If a distortion analyzer is available, omit this step. Adjust T105 (Pri.) after Step 6. At that time use a 1mV signal from an FM generator. Modulate 100% @ 400Hz. Adjust primary of T105 for minimum disotrtion. Should be less than 0.3%.
5	105MHz	105MHz	300Ω antenna terminals w/* matching network.	100% @ 400Hz	VTVM connected to TP1 and oscilloscope connected to L or R main output.		Oscillator trimmer C9.	Maximum negative voltage at TP1.	As TP1 voltage increases reduce output of signal generator to keep TP1 voltage as low as possible.
6	90MHz	90MHz	Same	Same	Same		Oscillator coil L4.	Same	Repeat steps 5 & 6 until dial calibration is accurate.
7	105MHz	105MHz	Same	Same	Same		Mixer RF2, RF1 trimmers C7-5-2	Same	Same as step 5.
8	90MHz	90MHz	Same	Same	Same		Mixer RF2, RF1 coils L3-2-1.	Same	Same as step 5. Then repeat steps 7 & 8 until TP1 voltage is as high as possible for the least signal input at both alignment frequencies.
9	Same	Same	Same	Same	VTVM connected to TP1 and a harmonic distortion analyzer to L or R output.				This step is an overall sensitivity check. Reduce input signal to the point where total noise and distortion reads 3% (-30dB). The input signal will then be the usable sensitivity and should be less than 2.5µV.

8	90MHz	90MHz	Same	Same	Same	Mixer RF2, RF1 coils L3-2-1.	Same	Same as step 5. Then repeat steps 7 & 8 until TP1 voltage is as high as possible for the least signal input at both alignment frequencies.
9	Same	Same	Same	Same	VTVM connected to TP1 and a harmonic distortion analyzer to L or R output.			This step is an overall sensitivity check. Reduce input signal to the point where total noise and distortion reads 3% (-30dB). The input signal will then be the usable sensitivity and should be less than 2.5μV.
10	Same	Same	Same	Same		R101,102, 106		With generator output at 200μF, adjust R106 for sensitivity meter reading of 6. With generator output at 100kμV, adjust R101 for full scale of sensitivity meter. (Selectivity switch in "Normal".) Adjust R102 for full scale of sensitivity meter. (Selectivity switch in "Narrow".)

MULTIPLEX DECODER ALIGNMENT

	TUNER DIAL SETTING	SIGNAL GENERATOR			INDICATOR		ADJUST	TEST LIMITS	REMARKS
		FREQ.	COUPLING	MODULATION	TYPE	CONNECTED TO			
1	100MHz	100MHz	300Ω antenna terminals w/ approx. 1000 microvolts signal w/* matching network.	75kHz Deviation @ 67kHz	AC-VTVM	L or R output jack.	L403 and L404 (SCA adj.)	Minimum output @ L or R output jack.	Adjust for minimum output with 67kHz modulation.
2	100MHz	100MHz	Same	19kHz stereo pilot.	AC-VTVM or oscilloscope w/very low cap. probe.	T401, Pin 2 or 3.	L402 (19kHz phase adj.) & T401 (19 kHz doubler)	Adjust for maximum AC voltage.	Decrease pilot level, if necessary, so that 19kHz circuits do not limit or saturate.
3	Same	Same	Same	Same	Same	T402, Pin 1 or 2.	T402 (Pri) & bottom (Sec) tuning slugs	Adj. for maximum AC voltage.	Decrease pilot level so that 19kHz and 38kHz circuits do not limit. Mode switch must be in stereo position.
4	Same	Same	Same	1kHz (100% modulation) L or R only, pilot level normal and on.	Same	L or R output jack.	T402, Bottom (Sec.) tuning slug. Also adj. R217.	35dB separation or more.	First, set R217 to MAX resistance. Modulate left channel and measure right channel output. Adjust T402 bottom - tuning slug (Sec.) for minimum right channel output (maximum separation). Then adjust R217 for maximum separation. Repeat the adjustment of T402 bottom and R217 until maximum separation is obtained. Then, reverse channels and measure left channel separation. For this adjustment and measurement, no test lead should be connected to TP#2.
5	100MHz	100MHz	Same	1kHz (100% modulation) L or R only, pilot on.	AC-VTVM	L or R fixed output jack.		Less than 25mV of residual.	Adjust "FM Level" control (R409) for 2.5 volts of audio output at fixed output jacks. Then, turn off the modulation and measure the residual of the 19kHz and 38kHz frequencies.

					probe.				
3	Same	Same	Same	Same	Same	T402, Pin 1 or 2.	T402 (Pri) & bottom (Sec) tuning slugs	Adj. for maximum AC voltage.	Decrease pilot level so that 19kHz and 38kHz circuits do not limit. Mode switch must be in stereo position.
4	Same	Same	Same	1kHz (100% modulation) L or R only, pilot level normal and on.	Same	L or R output jack.	T402, Bottom (Sec.) tuning slug. Also adj. R217.	35dB separation or more.	First, set R217 to MAX resistance. Modulate left channel and measure right channel output. Adjust T402 bottom - tuning slug (Sec.) for minimum right channel output (maximum separation). Then adjust R217 for maximum separation. Repeat the adjustment of T402 bottom and R217 until maximum separation is obtained. Then, reverse channels and measure left channel separation. For this adjustment and measurement, no test lead should be connected to TP#2.
5	100MHz	100MHz	Same	1kHz (100% modulation) L or R only, pilot on.	AC-VTVM	L or R fixed output jack.		Less than 25mV of residual.	Adjust "FM Level" control (R409) for 2.5 volts of audio output at fixed output jacks. Then, turn off the modulation and measure the residual of the 19kHz and 38kHz frequencies.

Note 1: If signal generator has other than 50 ohm internal impedance, use a resistor of 150 ohms less internal generator impedance.

FIG. 1 ANTENNA MATCHING NETWORK

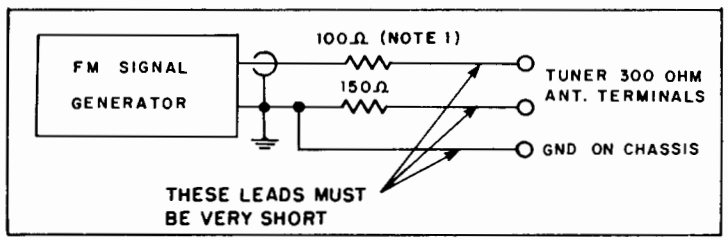

FIG. 2 TYPICAL IF RESPONSE CURVE

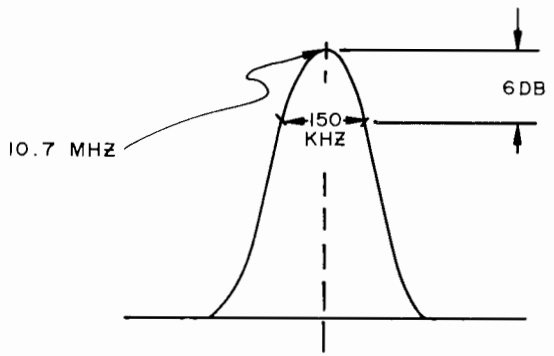

REPLACEMENT PARTS

All parts not listed are common items obtainable from radio parts jobbers.

Replacement parts may be obtained when ordered by PART NUMBER from:

McIntosh Laboratory, Inc.
Customer Service Department
2 Chambers Street
Binghamton, New York 13903
(telephone 607-723-3512)

CAPACITORS

Symbol Number	Description			Part Number
C109	Ta. Elect.	22µF	20V	066-148
C201,202	Polystyrene		2700pF	064-093
C203	Polystyrene		4700pF	064-091
C204,205	Mylar	.1µF		064-067
C207	Elect.	10µF	63V	066-178
C212,213	Elect.	22µF	35V	066-179
C215,216	Elect.	10µF	63V	066-178
C218	Mylar	.22µF	250V	064-068
C219	Elect.	5/300/150/100µF 200/50/50/30V		066-180
C220	Elect.	10µF	63V	066-178
C401	Mylar	.22µF	250V	064-068
C405	Elect.	100µF	25V	066-161
C408	Elect.	100µF	25V	066-161
C410	Polystyrene	2700pF	63V	064-093
C411	Ta. Elect.	1µF	35V	066-147
C413	Mylar	.1µF	250V	064-067
C415	Mylar	.22µF	250V	064-068
C416,417	Polystyrene		4700pF	064-091
C502	Polystyrene		4700pF	064-091
C503	Ta. Elect.	.47µF	35V	066-167
C507	Ta. Elect.	3.3µF	35V	066-170
C515	Polyester	.01µF		064-101
C518	Polystyrene	2700pF	63V	064-093
C520	Elect.	10µF	63V	066-178
C527	Elect.	100µF	25V	066-161

DIODES

D1	Ge. signal diode	070-003
D2,3	Si. diode	070-022
D101,102	Si. diode	070-022
D103,104	Ge. signal diode	070-003
D105,106	Ge. signal diode	070-003
D107,108	Si. diode	070-022
D201,202	Si. diode	070-031
D203,204	Si. diode	070-031
D205	Zener diode 24V	070-049
D401	Si. diode	070-003
D402,403	Si. diode	070-022
D404	Si. diode	070-022
D405,406	Ge. signal diode	070-003
D407,408	Ge. signal diode	070-003
D409	Ge. signal diode	070-003
D501	Si. diode	070-022
D502,503	Ge. signal diode	070-003

CHOKES & COILS

L1	1st RF coil	122-115
L2	2nd RF coil	122-114
L3	Mixer coil	122-113
L4	Oscillator coil	122-112
L101,102	Choke 75µH	122-013
L401	Choke 1MH	122-092
L402	Filter coil (19kHz)	122-094
L403,404	Filter coil (SCA)	122-093
L501	AM antenna	122-110
L502	AM RF coil	122-086
L503	AM oscillator coil	122-085
L504	Choke 1.2µH	122-011

TRANSISTORS

Q1,2	Si. M.O.S. F.E.T.	132-088
Q3	Si. NPN transistor	132-015
Q4	Si. Junction F.E.T.	132-084
Q5	Si. Junction F.E.T.	132-068
Q6	Si. M.O.S. F.E.T.	132-086
Q201,202	Si. NPN transistor	132-056
Q203,204	Si. NPN transistor	132-090
Q205	Si. NPN transistor	132-054
Q206	Si. NPN transistor	132-065
Q401	Si. NPN transistor	132-092
Q402	Si. NPN transistor	132-090
Q403,404	Si. NPN transistor	132-092
Q405	Si. NPN transistor	132-092
Q406	Si. NPN transistor	132-042
Q501,502	Si. NPN transistor	132-082
Q503	Si. NPN transistor	132-082
Q504	Si. NPN transistor	132-090

F201
R228
R236
R237
S203
S204
S401
S502
T1
T2
T3
T101
T102
T103
T104
T105
T201
T401
T402
T501
T503
M40
M50
IC1
FN1
XF5

diode	070-022
diode	070-031
diode	070-031
er diode 24V	070-049
diode	070-003
diode	070-022
diode	070-022
signal diode	070-003
signal diode	070-003
signal diode	070-003
diode	070-022
signal diode	070-003

HOKES & COILS

RF coil	122-115
RF coil	122-114
er coil	122-113
illator coil	122-112
ke 75µH	122-013
ke 1MH	122-092
ter coil (19kHz)	122-094
ter coil (SCA)	122-093
antenna	122-110
RF coil	122-086
oscillator coil	122-085
ke 1.2µH	122-011

TRANSISTORS

M.O.S. F.E.T.	132-088
NPN transistor	132-015
Junction F.E.T.	132-084
Junction F.E.T.	132-068
M.O.S. F.E.T.	132-086
NPN transistor	132-056
NPN transistor	132-090
NPN transistor	132-054
NPN transistor	132-065
NPN transistor	132-092
NPN transistor	132-090
NPN transistor	132-092
NPN transistor	132-092
NPN transistor	132-042
NPN transistor	132-082
NPN transistor	132-082
NPN transistor	132-090

FUSES

F201	Fuse .5A slo-blo	089-020

POTENTIOMETERS

R228	Volume control	134-217

RESISTORS

R236	Wirewound 1.8Ω 1W	139-077
R237	Wirewound 2Ω 2W	139-005

SWITCHES

S203	Stereo filter switch	146-137
S204	Mode selector switch	146-135
S401	Muting switch	146-138
S502	Selectivity switch	146-154

TRANSFORMERS

T1	Balun	043-226
T2	FM IF transformer	162-059
T3	FM IF transformer	162-042
T101	FM IF filter input	162-053
T102	FM IF filter output	162-052
T103	FM IF filter input	162-053
T104	FM IF filter output	162-052
T105	FM discriminator	162-036
T201	Power transformer	043-865
T401	FM RF transformer (19kHz)	162-055
T402	FM RF transformer (38kHz)	162-054
T501,502	AM IF transformer	162-050
T503	Matching transformer	162-061

MODULES

	LDR network	144-013

METERS

M401	Signal strength meter	124-005
M501	Tuning meter	124-006

INTEGRATED CIRCUIT

IC101,102	Integrated circuit	133-002

FILTERS

FN1	FM filter	180-009
XF501	AM filter	180-010

LAMPS

	#1847 (Meter)	058-008
	#1866 (Front Panel)	058-014
	#1828 (MPX)	
	Festoon lamp	

FRONT PANEL

Front panel	
Front panel enc	
Volume knob	
Tuning knob	
Mode selector k	
Stereo filter k	
Selectivity kno	
FM muting knob	

MOUNTING

Shelf bracket	
Shelf bracket	
Mounting templa	
Hardware packa	

MISCELLANE

Plastic feet	
Tuning shaft	
Shipping carto	
Push terminal	
Owners manual	
Dial cord	
Dial pointer	
Shorting plug	
AC line cord	
FM dipole ante	
Fuseholder	
Dial glass	

MR 74

#1828 (MPX)	058-027
Festoon lamp	058-032
FRONT PANEL & TRIM	
Front panel	044-303
Front panel end caps	018-120
Volume knob	044-372
Tuning knob	043-272
Mode selector knob	044-372
Stereo filter knob	043-428
Selectivity knob	043-428
FM muting knob	043-428
MOUNTING SYSTEM	
Shelf bracket (right)	043-622
Shelf bracket (left)	043-623
Mounting template #100	038-179
Hardware package	043-446
MISCELLANEOUS ITEMS	
Plastic feet	017-041
Tuning shaft	021-067
Shipping carton	
Push terminal (antenna)	074-032
Owners manual	038-552
Dial cord	044-226
Dial pointer	043-876
Shorting plug	127-021
AC line cord	170-021
FM dipole antenna	170-033
Fuseholder	178-001
Dial glass	

15C0214S7-M2551